


# Default Username and Password

When you access Reactor (the configuration web page) you are met by a login screen, asking for username and password.

The default factory username and password is:

Username: admin

Password: skaarhoj

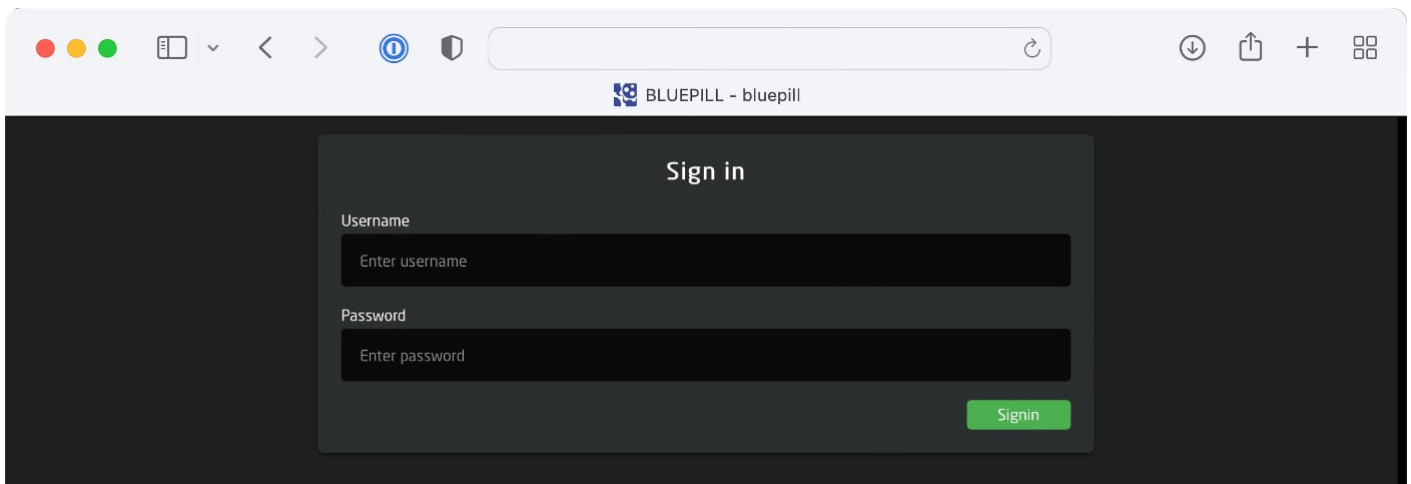

---

Revision #4

Created 22 June 2022 07:20:10 by Kenneth Kikkenborg

Updated 22 June 2022 09:54:45 by Heather Pedersen