


# Light Class Configurations

**Light Class** configurations are default configurations provided by SKAARHOJ that work with Controllers that have 2 **Encoders** as the main components.



To use them in Reactor, select a "Generic" configuration for your panel, then fill the camera Selector with devices that support **Light Class** controllers.

All **Light Class** compatible controllers are:

## PTZ Wiz

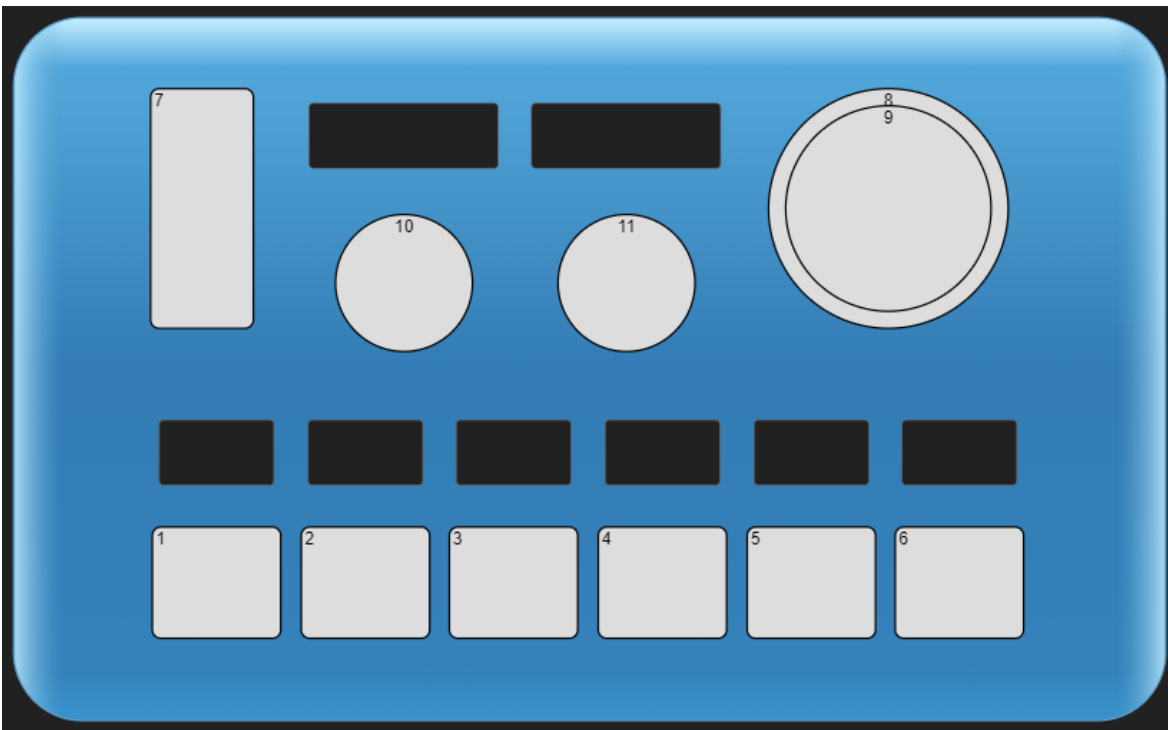


## PTZ Wiz + Frame Shot

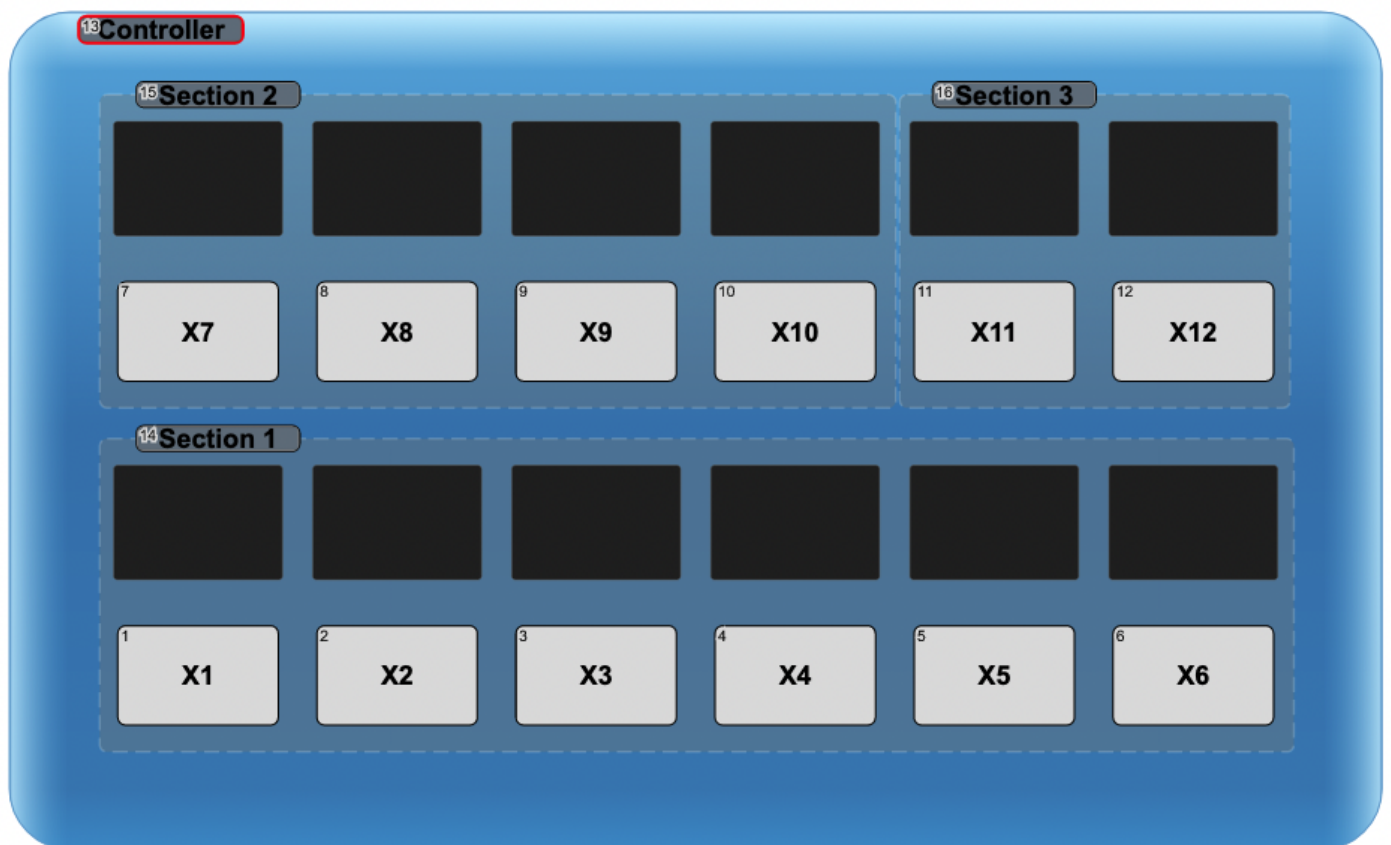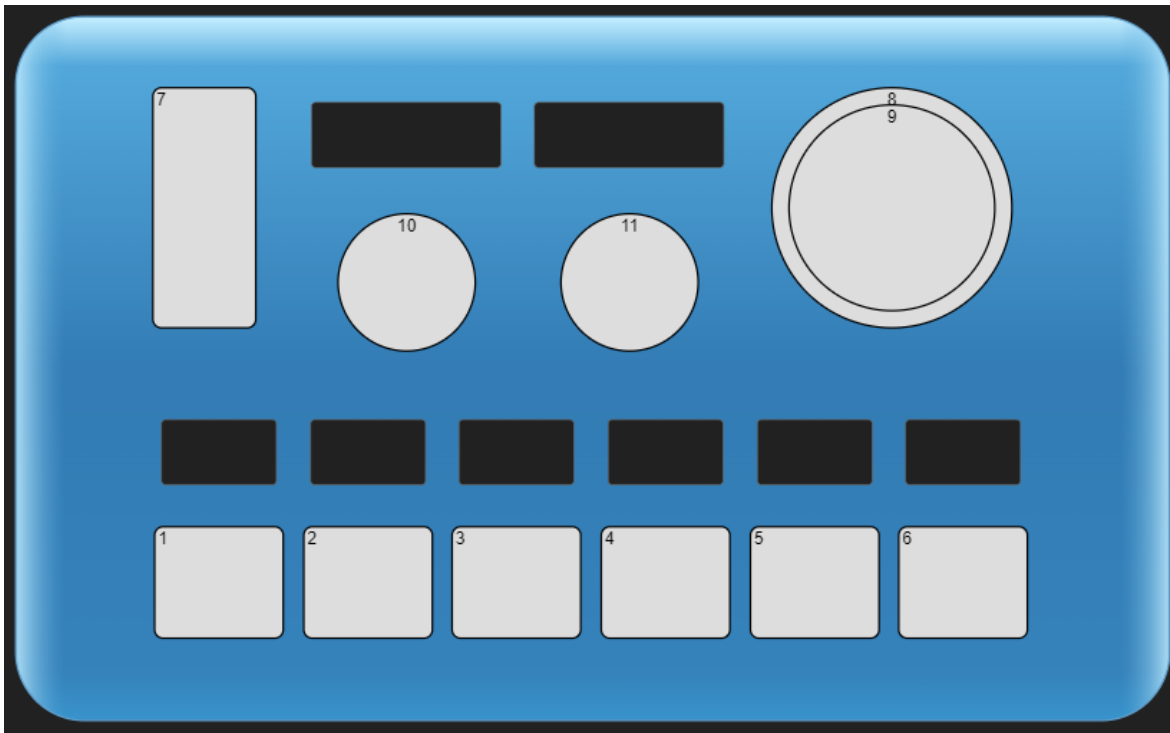

## Air Fly Pro (V2 and V3)

Some Controllers like the Air Fly Pro, includes an embedded PTZ Wiz, and this part of the controller can be used to map a PTZ Light Class Configuration. When paired with a config that supports it.

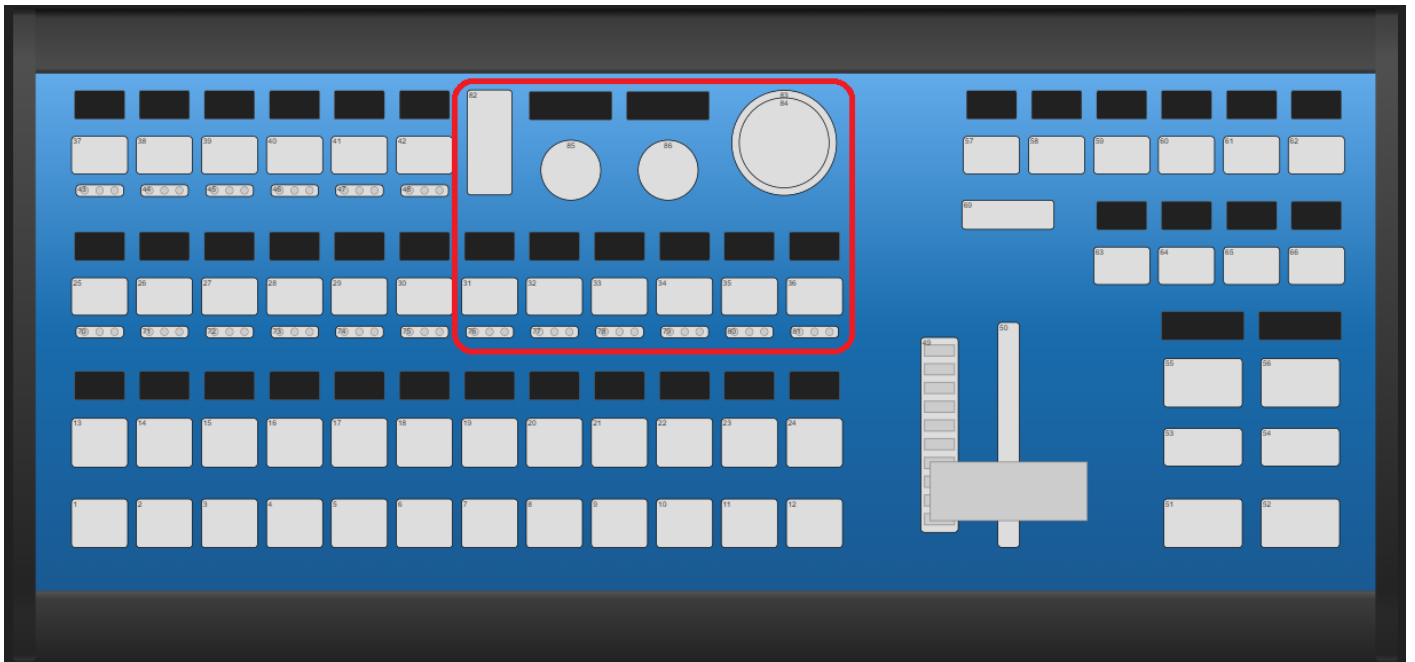

Revision #8

Created 10 March 2022 10:02:21 by Lukas Bachschwell

Updated 1 November 2023 08:55:48 by Samuel Jakobsen