


Light Class Configurations

Light Class configurations are default configurations provided by SKAARHOJ that work with Controllers that have 2 **Encoders** as the main components.



To use them in Reactor, select a "Generic" configuration for your panel, then fill the camera Selector with devices that support **Light Class** controllers.

All **Light Class** compatible controllers are:

PTZ Wiz

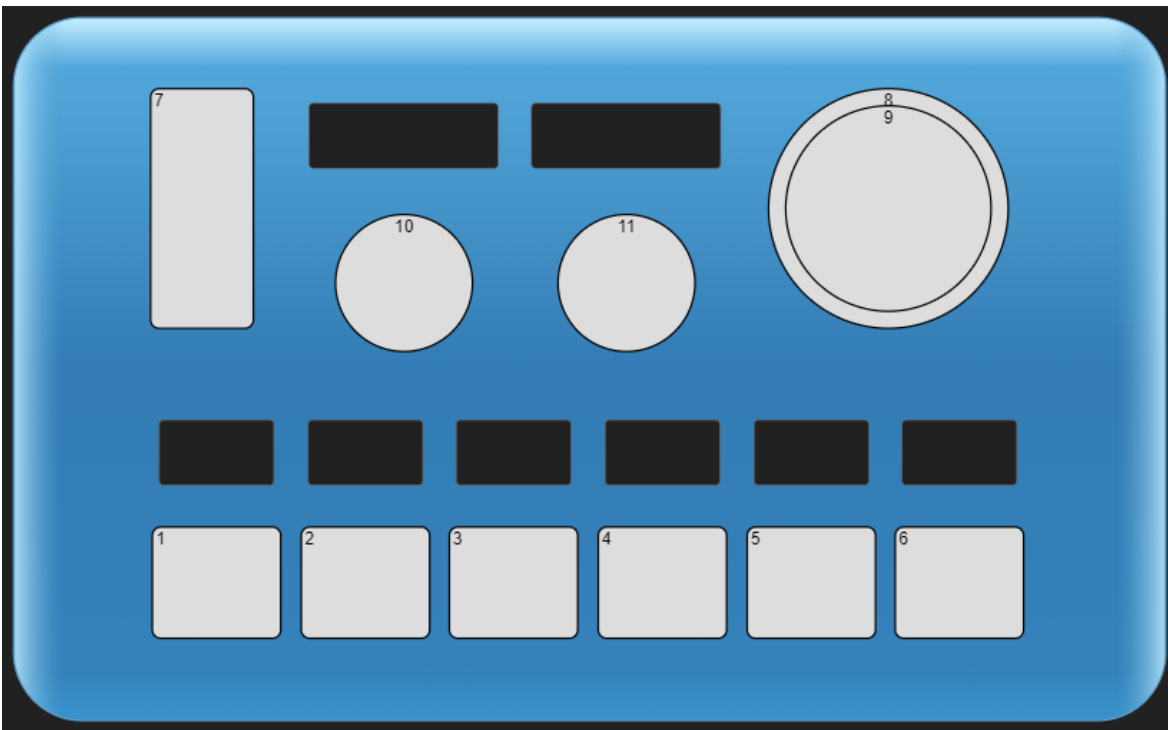


PTZ Wiz + Frame Shot

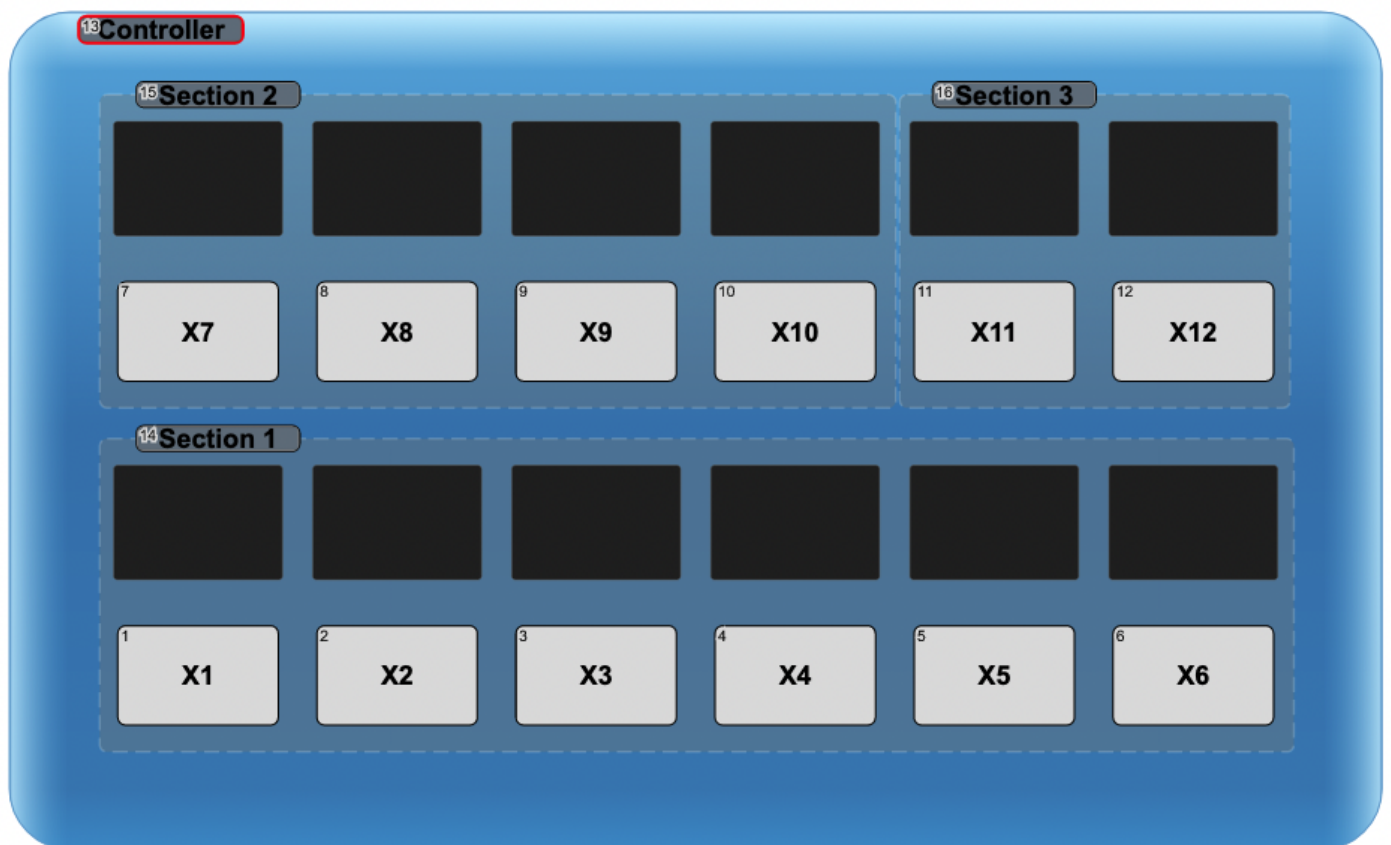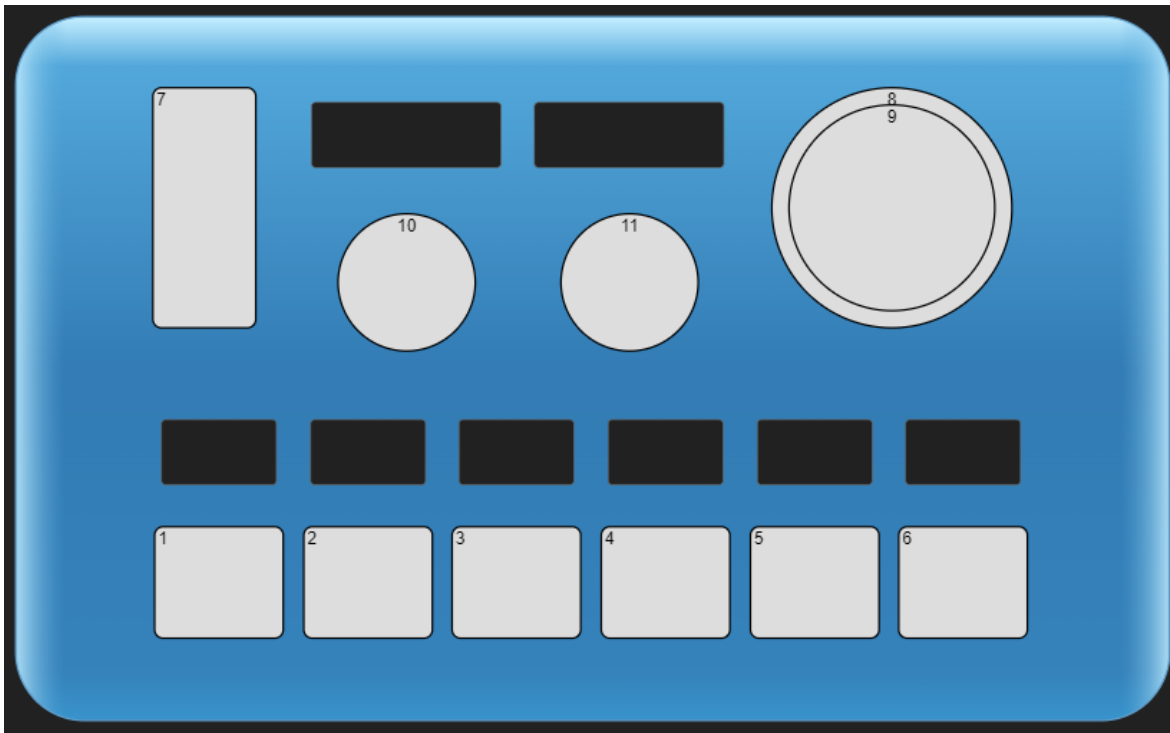

Air Fly Pro (V2 and V3)

Some Controllers like the Air Fly Pro, includes an embedded PTZ Wiz, and this part of the controller can be used to map a PTZ Light Class Configuration. When paired with a config that supports it.

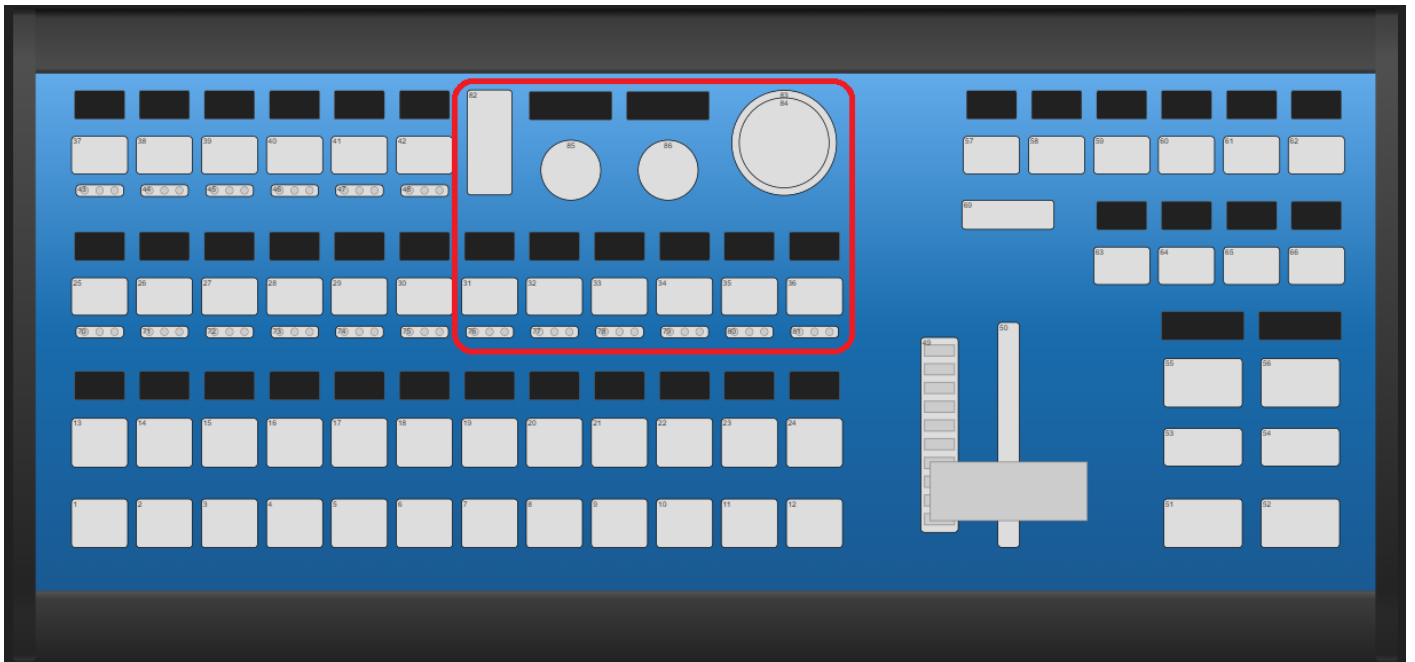

Revision #8

Created 10 March 2022 10:02:21 by Lukas Bachschwell

Updated 1 November 2023 08:55:48 by Samuel Jakobsen