


No Lights on Panel

If your panel is not lighting up as it should, but everything else seems like it is working as expected, it may be the panel brightness is set too low.


By default a panel is set to inherit the brightness from the panel group it is in.

In the Panel Details, you can deselect Inherit Sleep, dim and brightness from Group.

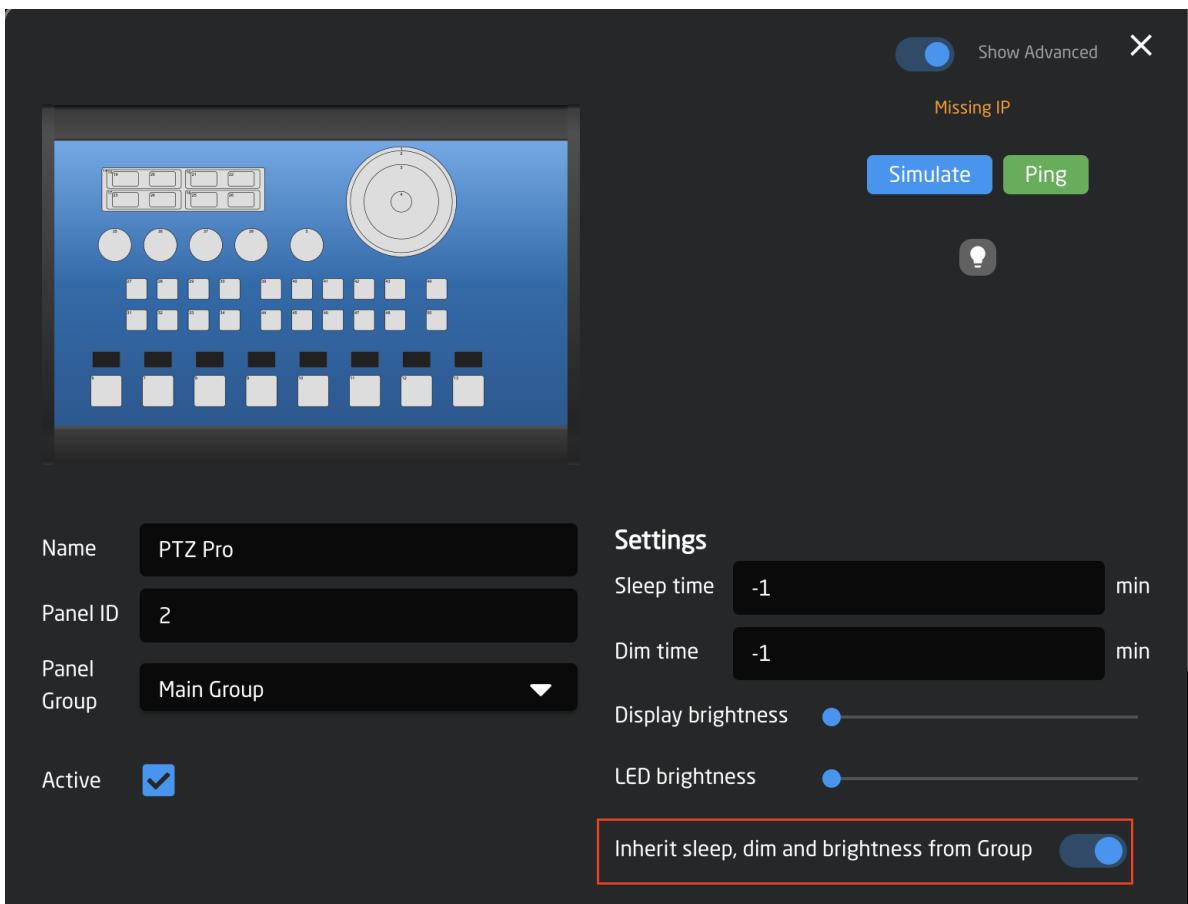


The screenshot shows the 'PTZ Pro' panel settings. The panel is named 'PTZ Pro' with ID '2' and is part of the 'Main Group'. It is currently active. The settings include 'Sleep time' and 'Dim time' both set to '-1' minute. 'Display brightness' and 'LED brightness' are shown as sliders. A red box highlights the 'Inherit sleep, dim and brightness from Group' toggle, which is currently turned on. Other visible elements include a 'Show Advanced' toggle, a 'Missing IP' status, and 'Simulate' and 'Ping' buttons.

It is then possible to set the LED and Display brightness per panel

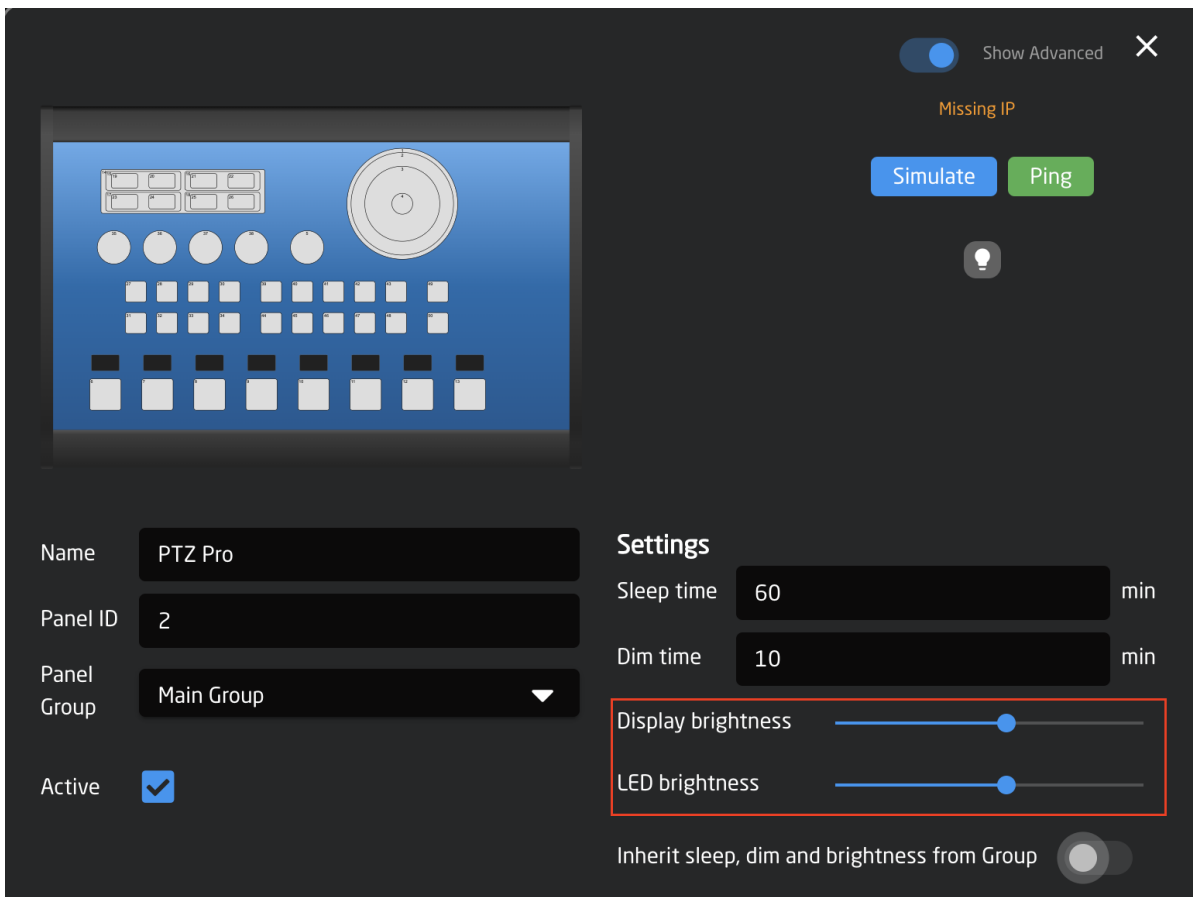


If you would all your panels to maintain the same level of brightness without setting them individually, this can be adjusted in the group settings.

 To access the group settings, set the Home page to Show Advanced.



Then click into the group details.

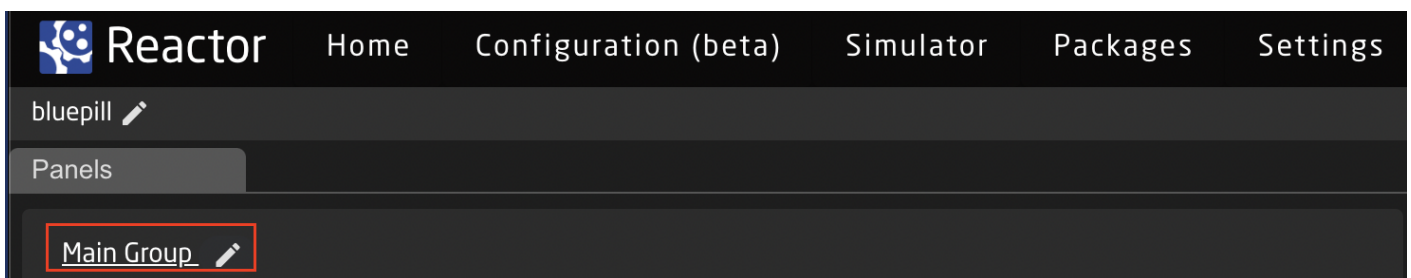

From there you can set the default settings for the group.

Group Name:

Main Group

Sleep time

60

min

Dim time

10

min

Display brightness

LED brightness

Table

Graphical View

Group 'Main Group' contains these panels:

Name	Panel ID	Active	Serials	Models	IP and Port	Type
bluepill	1	yes		BLUEPILL	host	server
PTZ Pro	2	yes		PTZPRO		server

Delete Group

Save

Revision #1

Created 23 September 2022 11:30:42 by Heather Pedersen

Updated 4 December 2023 09:45:15 by Heather Pedersen