


No Lights on Panel


If your panel is not lighting up as it should, but everything else seems like it is working as expected, it may be the panel brightness is set too low.

By default a panel is set to inherit the brightness from the panel group it is in.

In the Panel Details, you can deselect Inherit Sleep, dim and brightness from Group.

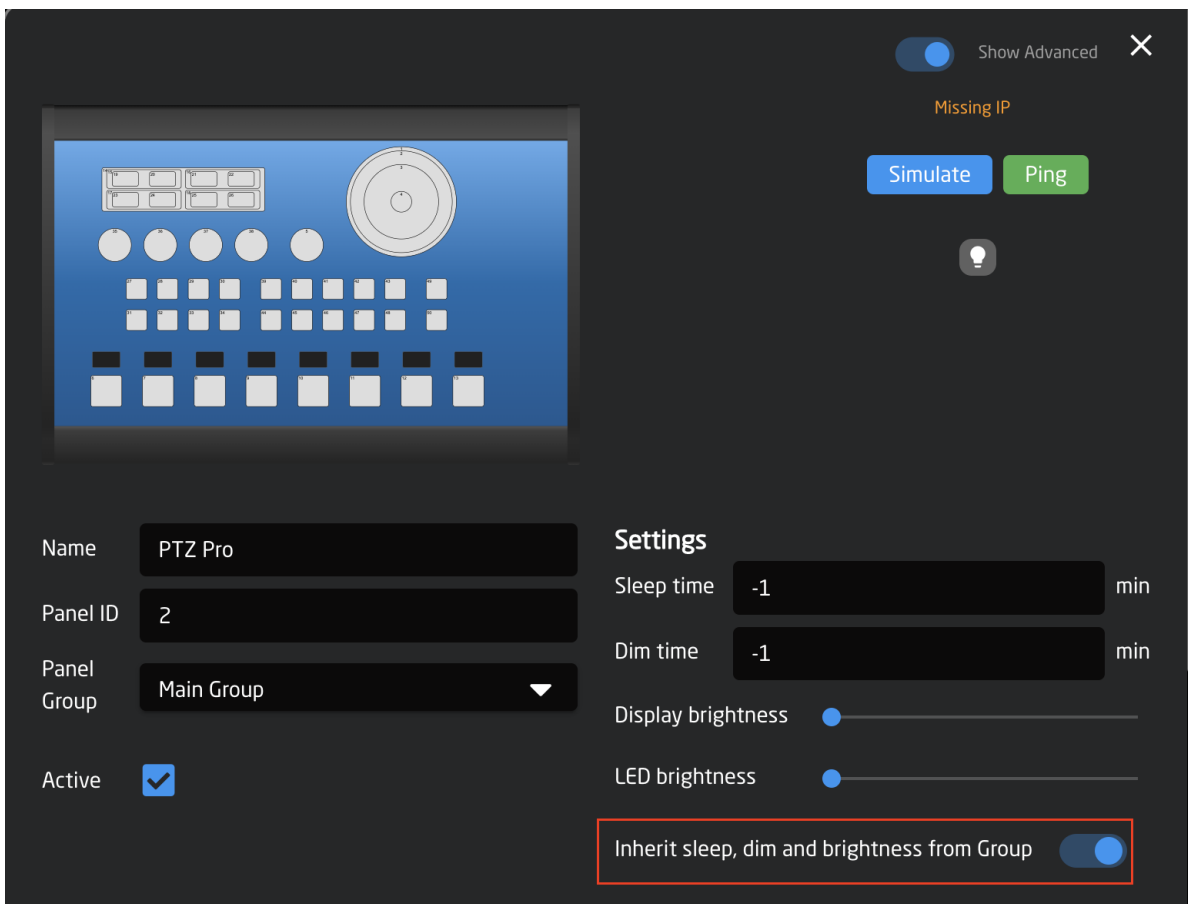


It is then possible to set the LED and Display brightness per panel

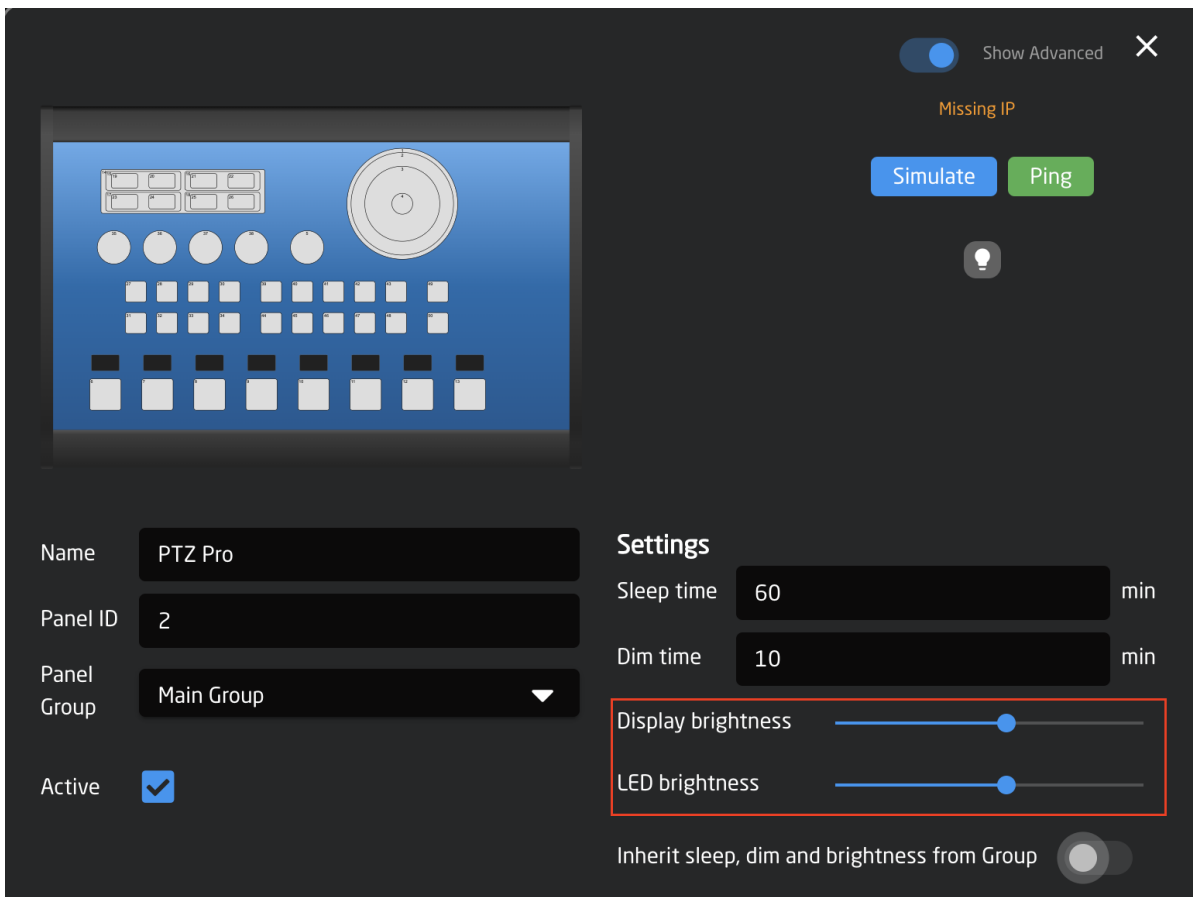


If you would all your panels to maintain the same level of brightness without setting them individually, this can be adjusted in the group settings.

 To access the group settings, set the Home page to Show Advanced.



Then click into the group details.

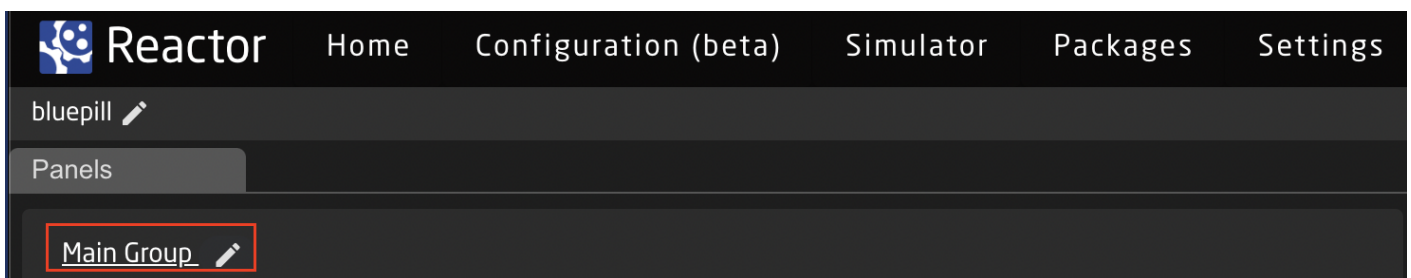

From there you can set the default settings for the group.

Group Name:

Main Group

Sleep time

60

min

Display brightness

Dim time

10

min

LED brightness

Table

Graphical View

Group 'Main Group' contains these panels:

Name	Panel ID	Active	Serials	Models	IP and Port	Type
bluepill	1	yes		BLUEPILL	host	server
PTZ Pro	2	yes		PTZPRO		server

Delete Group

Save

Revision #1

Created 23 September 2022 11:30:42 by Heather Pedersen

Updated 4 December 2023 09:45:15 by Heather Pedersen