


Ping Tool

Within Blue Pill it is possible to ping devices on the network allowing you to check that they are reachable from the Blue Pill or to check the stability and latency.

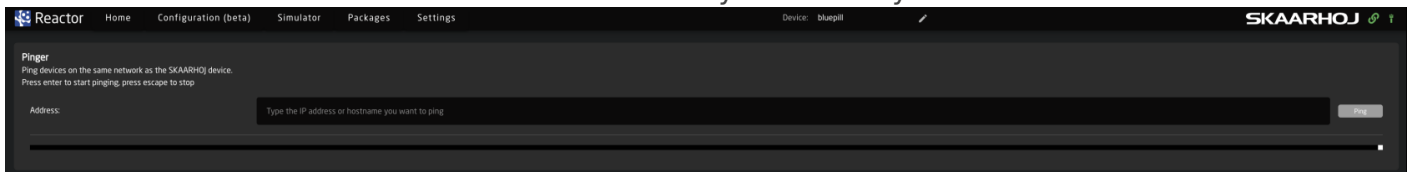

Guide:

- Use any browser to access the Blue Pill via its IP address
- To access the toolpage write /tools after the IP

Example: XX.XX.XX.XX/tools

- To start using the tool, write the IP of the device that should be pinged, and press the 'Ping' button or 'Enter' on the keyboard

If it is able to ping the device successfully, it will write the Round Trip Time for each package

156.441µs	Ping 0	Roundtrip: 156.441µs
223.976µs	Ping 1	Roundtrip: 223.976µs
229.81µs	Ping 2	Roundtrip: 229.81µs
247.198µs	Ping 3	Roundtrip: 247.198µs
236.088µs	Ping 4	Roundtrip: 236.088µs
404.917µs	Ping 5	Roundtrip: 404.917µs
234.014µs	Ping 6	Roundtrip: 234.014µs

- To stop the pinging press, the now Orange button, 'stop ping' or 'Escape' on the keyboard

A final report will be displayed. It contains information about how many packages were successfully transmitted and the minimum, maximum and average RTT

236.921µs	Ping 4	Roundtrip: 236.921µs
100%	Recieved 5 of 5	Minimum RoundTrip: 165.534µs Average RoundTrip: 217.625µs Maximum RoundTrip: 238.847µs

Revision #5

Created 14 June 2022 09:53:10 by Heather Pedersen

Updated 6 February 2024 10:08:36 by Heather Pedersen