



# Populating Constant Sets

The final step is to fill in any constant sets. The constant sets are available based on the chosen configuration and should contain entries such as specific cameras for a PTZ controller, or the inputs for a video switcher etc. They are most common when working with PTZ cameras and routing panels, though may be available for additional device configurations.

The setup tables will auto save and quickly appear on displays and enable the function.

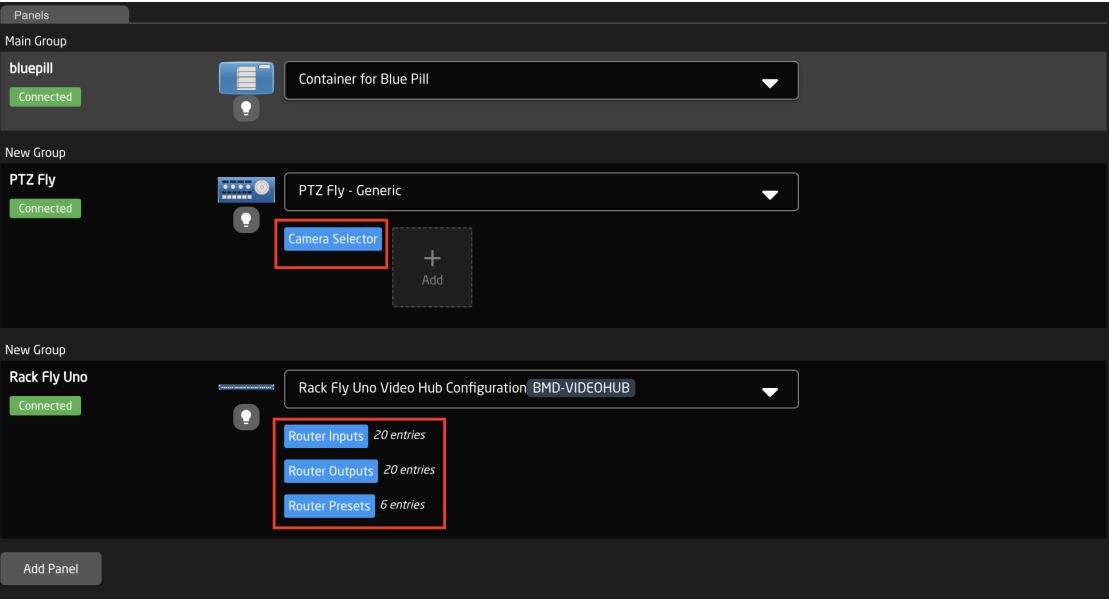



An example of a setup table would be a camera selector and can be seen below. These can be different depending on the selected configuration. From here the order on the camera selector row of the panel will be set as well as the desired name on the displays.

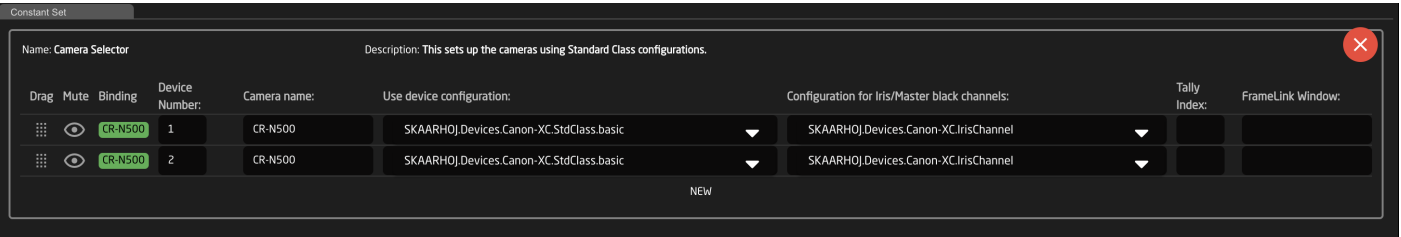

Column	Description
Drag	Allows for quick rearranging of camera order. Right clicking on drag will allow for deleting the row.
Mute	Allows for removing access to a specific camera or to leave a blank spot on the panel
Binding	Allows for the selecting of a specific connected camera
Camera Name	Customizable name to appear on the displays. Character limit is determined by size of display and can vary.

Device Number	Ties the camera selector to the specific device. This is found in the Devices section. Each device will have a unique device number per device core. This box should auto-populate when a camera is selected in binding
Link Selector	Selects the protocol based configuration associated with camera. Needed protocol can be seen in the Devices section, each device is grouped into their native protocols. <b>Double check the correct configuration is selected. Improper selection will effect camera control.</b>
Channel Link	Selects the needed protocol for Iris/Master Black control. For cameras without a variable lens this will follow the same protocol as the device. For cameras with a variable lens, select the protocol for the attached lens. <b>Not available on all configuration classes.</b>
Tally Index	Sets the Tally Index number to connect with associated tally source device. See Blue Pill/Reactor Manual for more information. <b>This column does not need to be filled out for standard operation.</b>
Route Index	Sets the Route Index number to connect with associated routing device. See Blue Pill/Reactor Manual for more information. <b>This column does not need to be filled out for standard operation.</b>
FrameLink Window	Sets the FrameLink Window value associated with the FrameLink device core for use with FrameLink compatible devices. See Blue Pill/Reactor Manual for more information. <b>This column does not need to be filled out for standard operation.</b>

An example of a router inputs selector can be seen below. These can be different depending on the selected configuration and device. From here the order on the inputs/outputs row of the panel will be set as well as the desired name on the displays and button color.

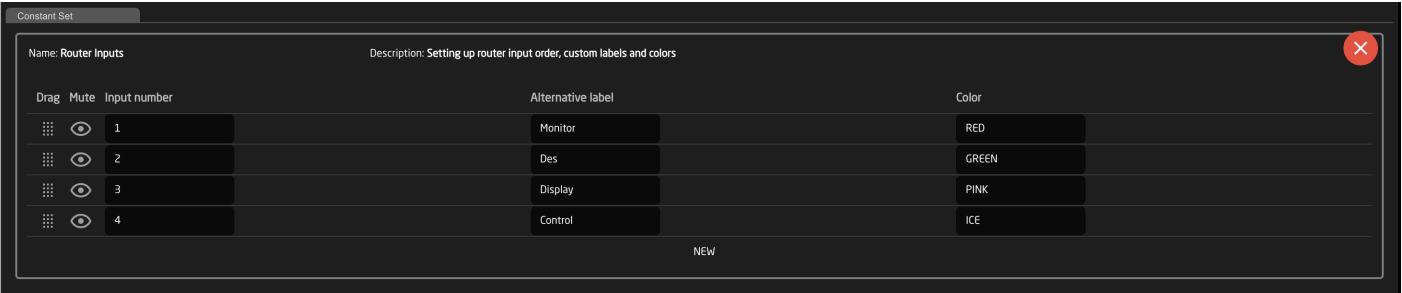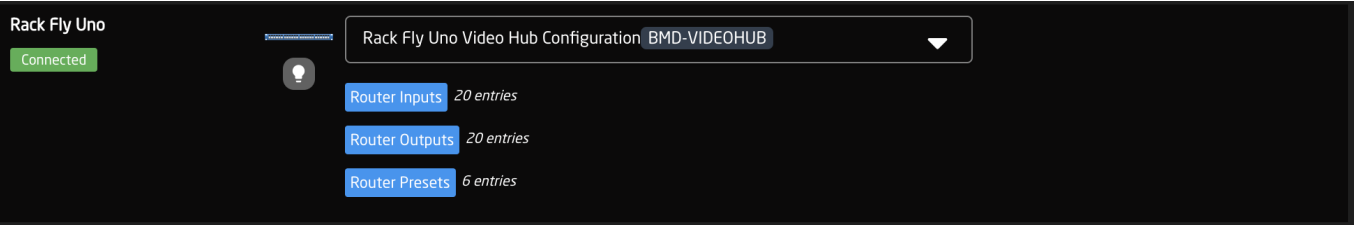

Column	Description
Drag	Allows for quick rearranging of camera order. Right clicking on drag will allow for deleting the row.
Mute	Allows for removing access to a specific input/output or to leave a blank spot on the panel
Output Number/Input Number	Ties the selector to the specific input/output. This is found is determined by the individual router.

Alternative Label	Customizable name to appear on the displays. Character limit is determined by size of display and can vary.
Color	Sets the button feedback color. Color options are: OFF, WHITE, WARM, RED, ROSE, PINK, PURPLE, AMBER, YELLOW, DARKBLUE, BLUE, ICE, CYAN, SPRING, GREEN, MINT. The format for color selection is all large letters with no spaces between words.

---

Revision #4

Created 24 March 2022 11:07:34 by Heather Pedersen

Updated 23 February 2023 11:34:25 by Heather Pedersen