

# Pro Class Configurations

**Pro Class** configurations are default configurations provided by SKAARHOJ that work with controllers that have **8 Encoders** as their main components.

To use them in Reactor, select a "Generic" configuration for your panel, then fill the camera selector with devices that support **Pro Class** controllers.

All **Pro Class** compatible controllers are:

RCPv2, RCP Pro

## 40 Section 1

1 C1 2 C2 3 C3 4 C4 5 C5 6 C6 7 C7 8 C8

## 50 Section 2

9 Knob A 10 Knob B 11 Knob C 12 Knob D

## 51 Section 3

13 Knob E 14 Knob F 15 Knob G 16 Knob H

## 52 Section 4

17 24 Position UD

17 M1 18 M2 19 M3

## 53 Section 5

25 B7 26 B8 20 M4 21 M5 22 M6

27 ID Disp L 28 Display 29 ID Disp R

30 Black

30 ID Tally


## 54 Section 6

31 Iris 32 M7 33 M8

## 55 Section 7

34 B9 35 B10 36 B11 37 B13 38 LED Bar 39 Button 40 41 42

# PTZ Extreme (V1 and V2)

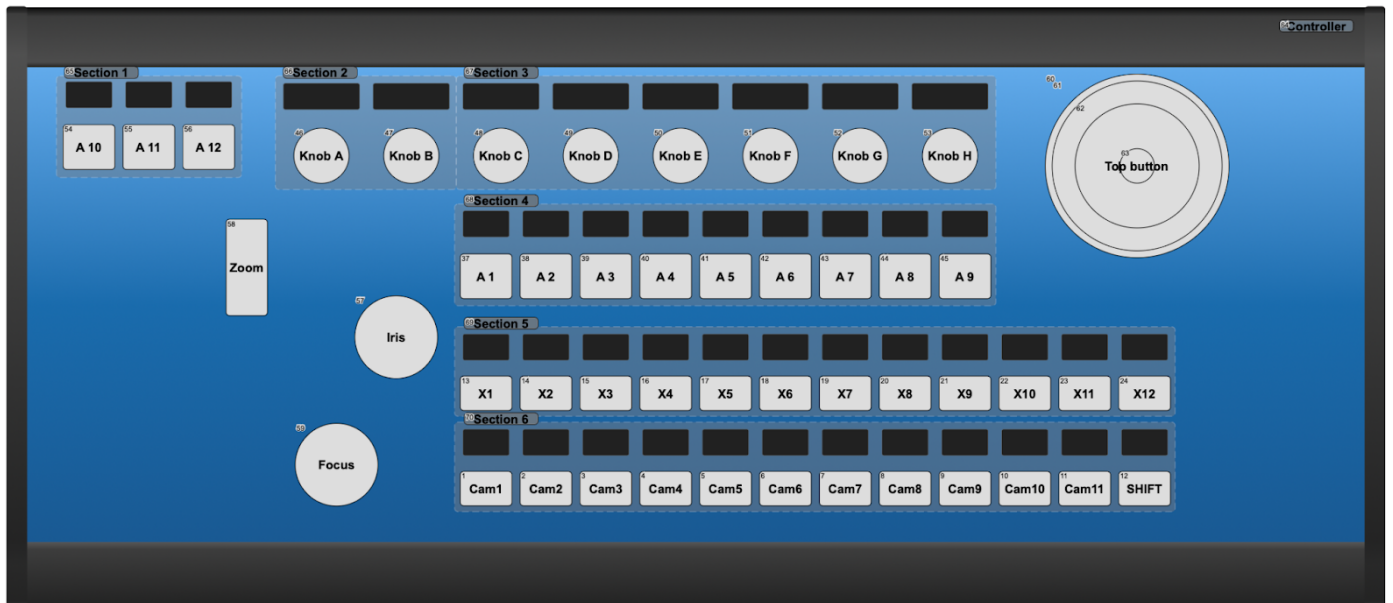

Revision #10

Created 9 March 2022 14:31:58 by Lukas Bachschwell

Updated 1 November 2023 08:55:48 by Samuel Jakobsen