

Pro Class Configurations

Pro Class configurations are default configurations provided by SKAARHOJ that work with controllers that have **8 Encoders** as their main components.

To use them in Reactor, select a "Generic" configuration for your panel, then fill the camera selector with devices that support **Pro Class** controllers.

All **Pro Class** compatible controllers are:

RCPv2, RCP Pro

40 Section 1

1 C1 2 C2 3 C3 4 C4 5 C5 6 C6 7 C7 8 C8

50 Section 2

9 Knob A 10 Knob B 11 Knob C 12 Knob D

51 Section 3

13 Knob E 14 Knob F 15 Knob G 16 Knob H

52 Section 4

23 24
Position UD

17 M1 18 M2 19 M3

53 Section 5

25 B7 26 B8 20 M4 21 M5 22 M6

27 ID Disp L 28 Display 29 ID Disp R

30 Black

30 ID Tally


54 Section 6

31 Iris 32 M7 33 M8

55 Section 7

34 35 B9 36 B10 37 B11 38 B13 39 LED 40 Bar 41 Button 42

PTZ Extreme (V1 and V2)

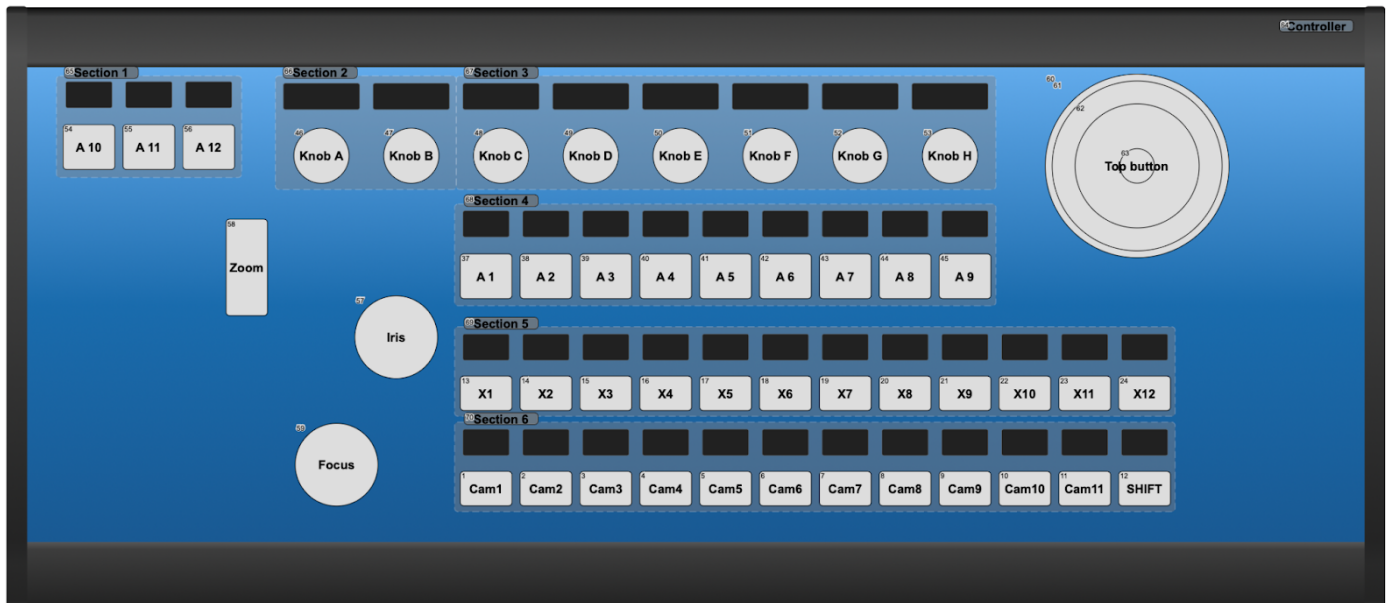

Revision #10

Created 9 March 2022 14:31:58 by Lukas Bachschwell

Updated 1 November 2023 08:55:48 by Samuel Jakobsen