


# Select Configuration

The controller's layout is determined by the configuration. In most cases, the Generic configuration is all that is needed, though for some combinations of panel and device, there are specific configurations.

The configuration is chosen in the drop down next to the panel.

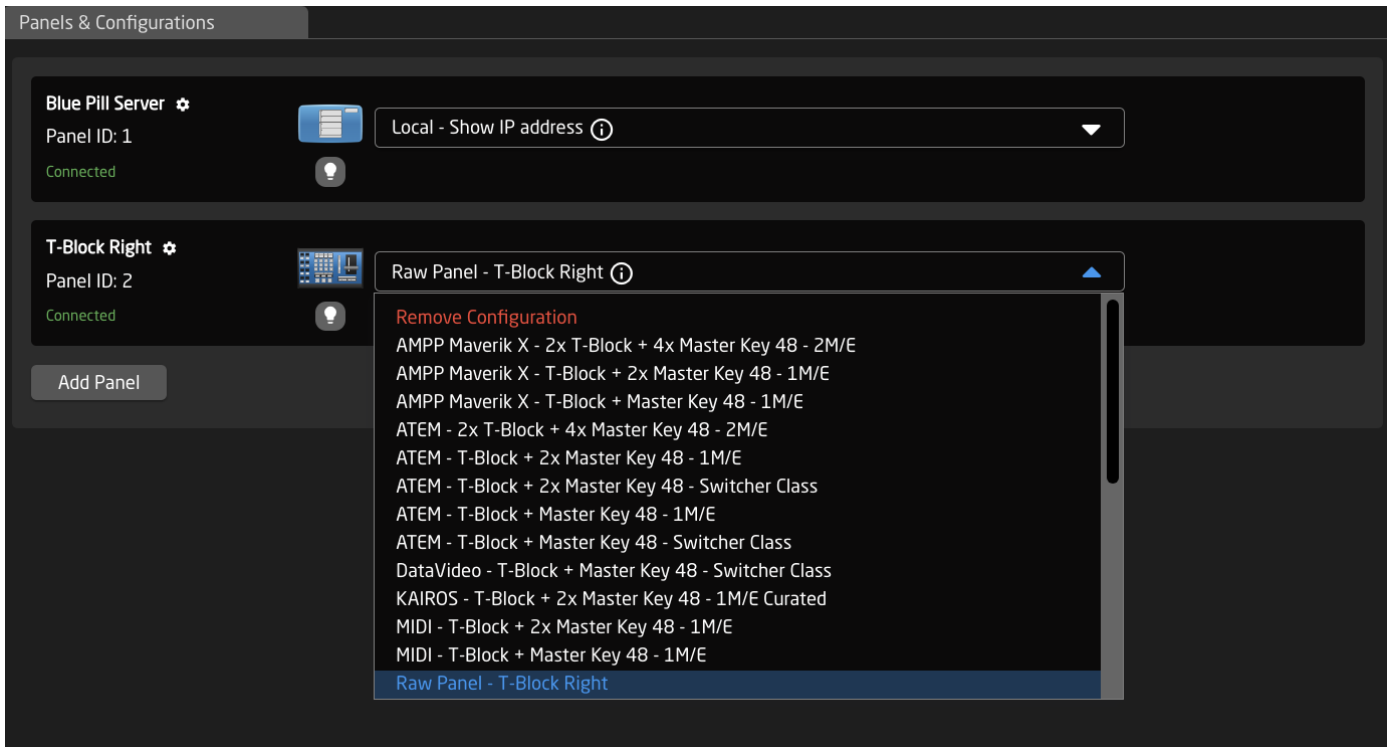

Revision #2

Created 24 March 2022 10:36:49 by Heather Pedersen

Updated 5 June 2025 07:29:44 by Heather Pedersen