


# Standard Class Configurations

**Standard Class** configurations are default configurations provided by SKAARHOJ that work with controllers that have 4 **Encoders** as their main components.


To use them in Reactor, select a "Generic" configuration for your panel, then fill the camera selector with devices that support **Standard Class** controllers.

All **Standard Class** compatible controllers are:

## PTZ Fly

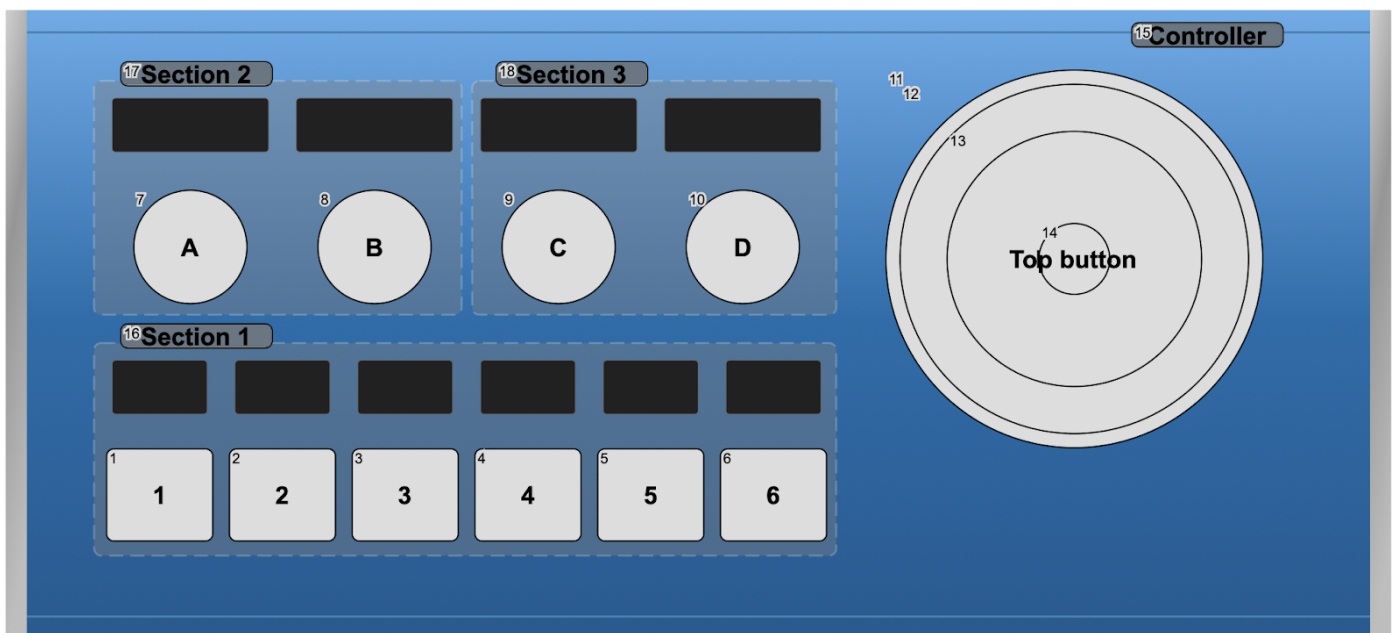


## PTZ Pro

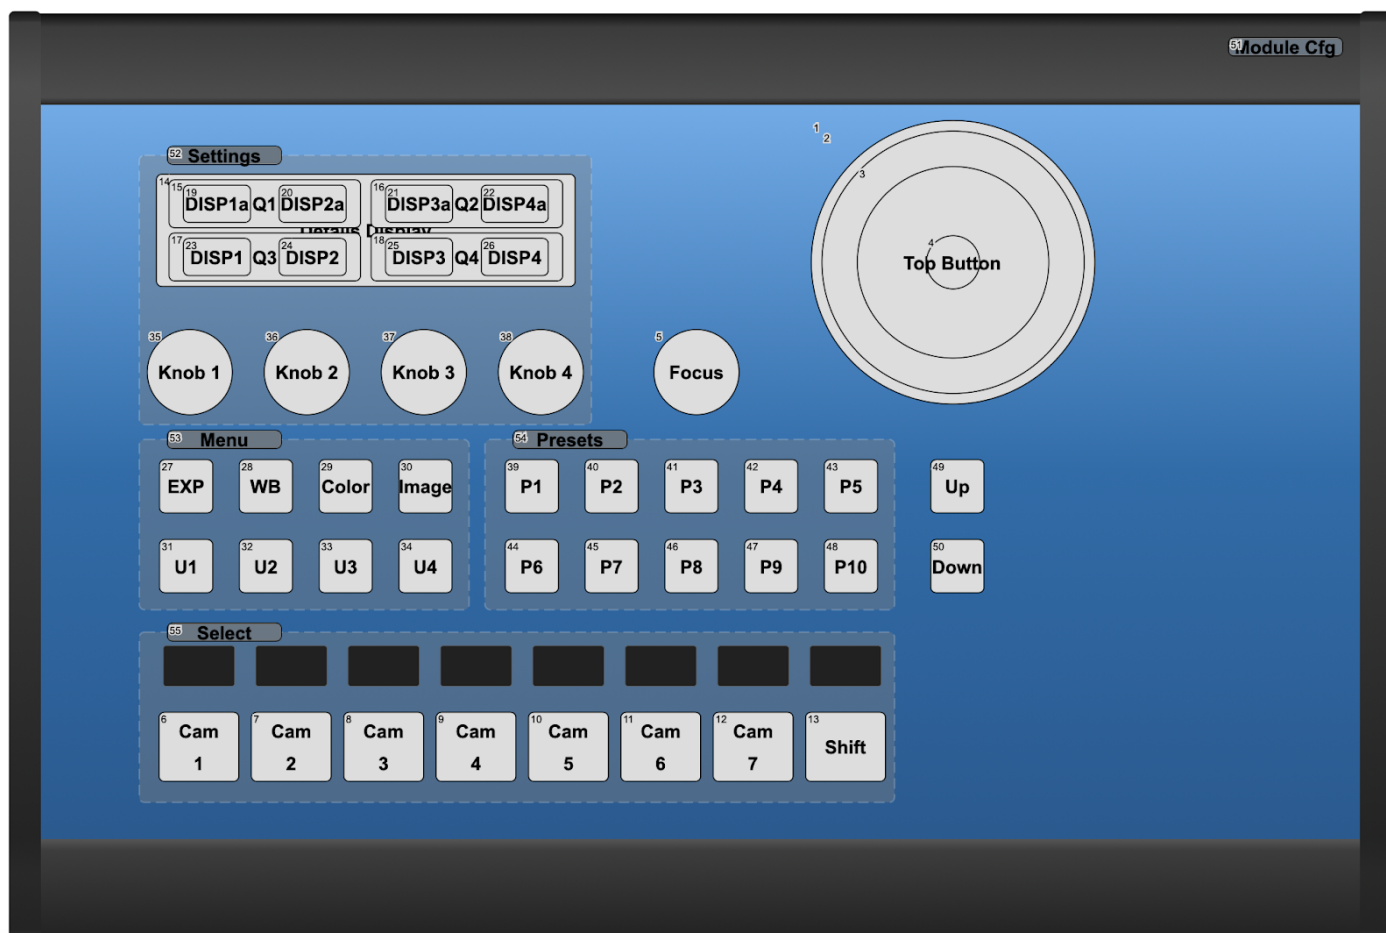


MKA 2



INLINE 22 + XC 7

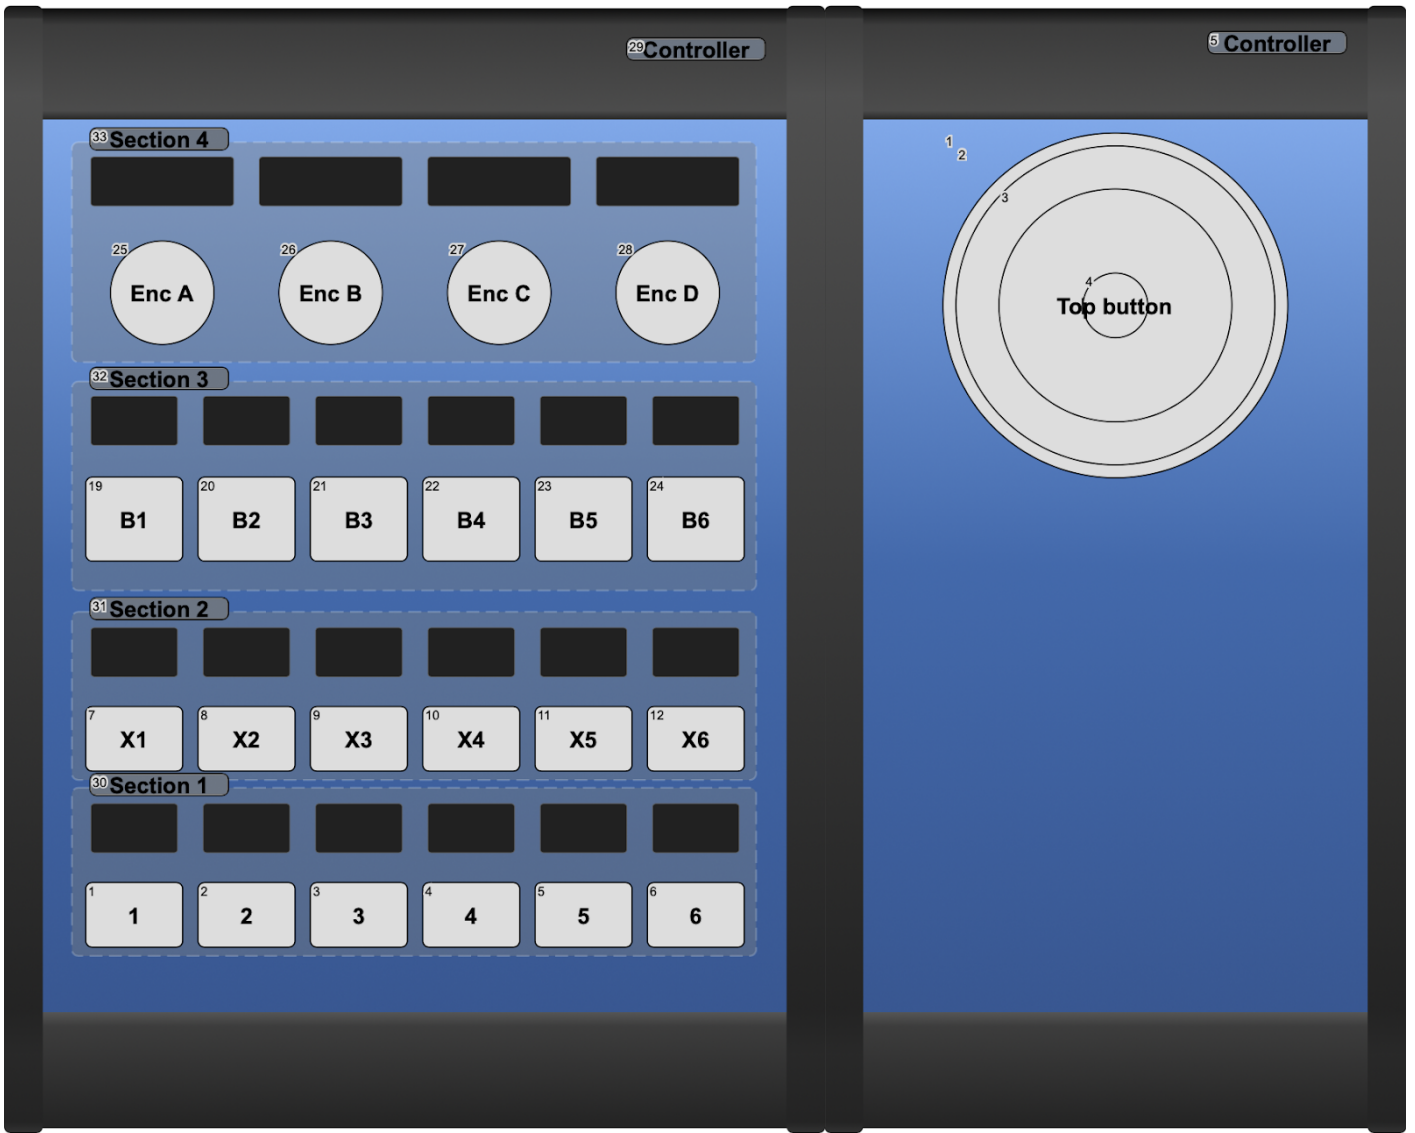

Color Fly

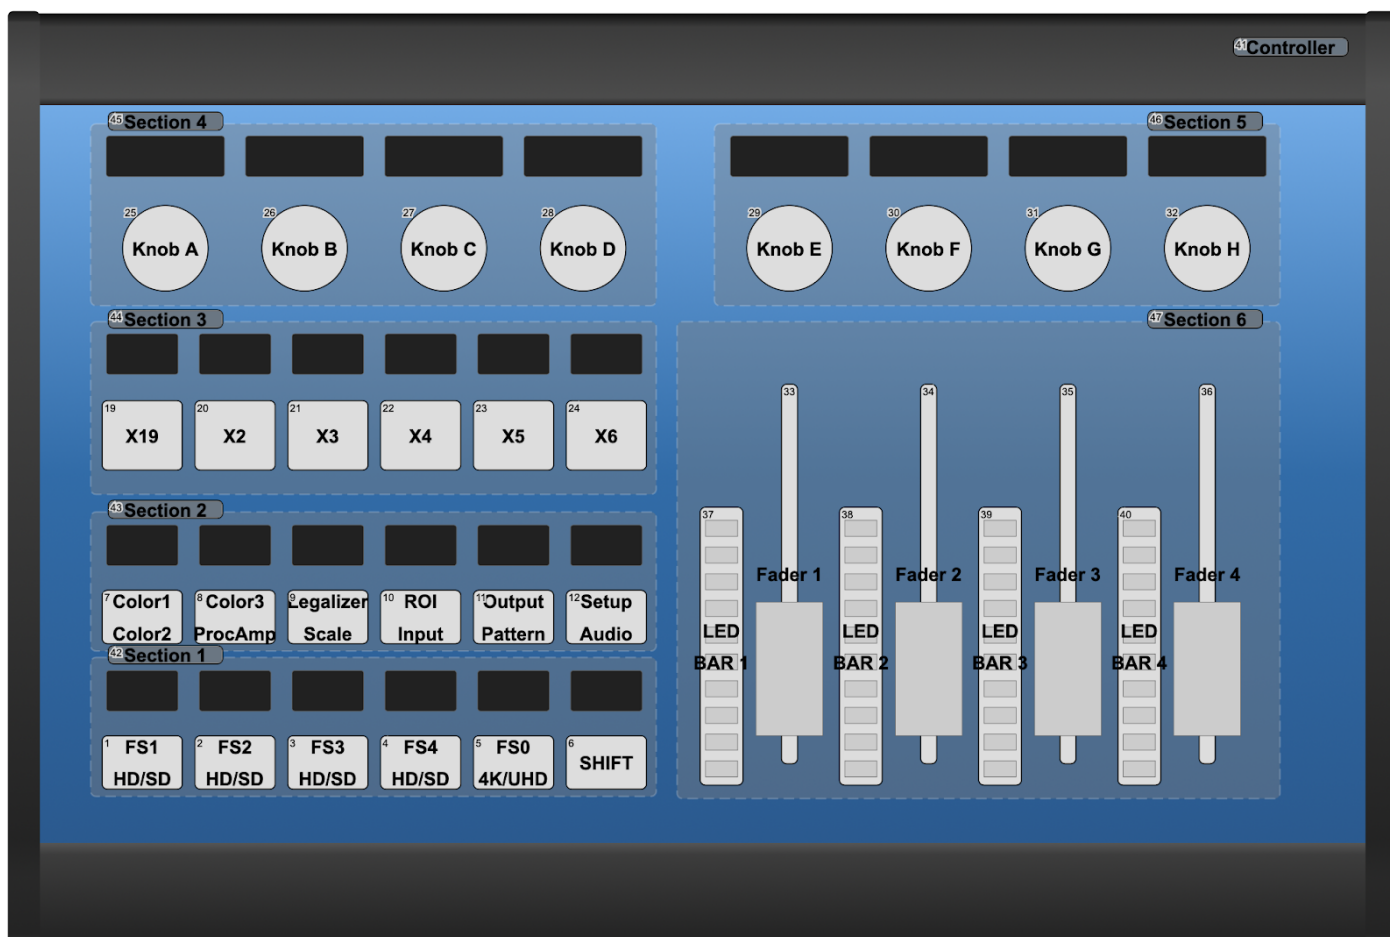

Revision #4

Created 9 March 2022 15:29:56 by Lukas Bachschwell

Updated 1 November 2023 08:55:48 by Samuel Jakobsen