


# Variables

This documentation might be outdated. Please consult the Reactor manual at [https://docs.skaarhoj.com/3\\_configuration/variables-conditions.html](https://docs.skaarhoj.com/3_configuration/variables-conditions.html)

For increased flexibility in a configuration Variables are often applied. A variable works as an adjustable value which can be numerical or text based that can be used in place of a set value.

Variables live on the layers of the tree but are used in lots of different places and in different ways. It is on the layers that you can see what Variables are available, their names, and their current value. In the example below you can see how:

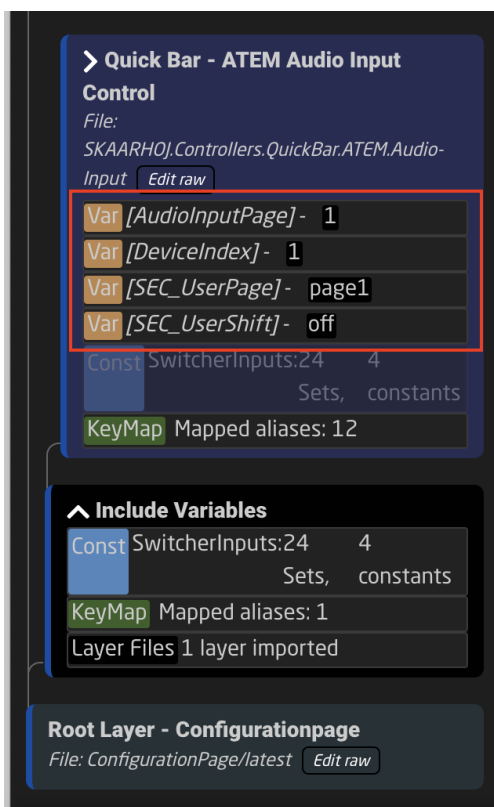

Please note, Variables in the tree are only accessible to the same layer they are created on or higher in the tree, unless defined otherwise in the variable set up. Additionally, layers limited by Active If conditions also set limits on the variable.

There are two types of variables; range or options.

Range Variables

Variable

[DeviceIndex] - DeviceIndex

Layer: [Default Blue Pill Server Configuration](#)

Name:

DeviceIndex

Description:

Type:

Range

Min:

1

Max:

10

Center (or Default):

1

Name	Variable's name
Description	Easy to understand description to help identify the variable's purpose
Type	Range or Options
Min	Minimum value for the variable (must be lower than the max). Can be set to 0
Max	Maximum value for the variable (must be higher than the max)
Center (or Default)	Default value for the variable if not saved on panel reboot.

Default to first:
☒

Default Value:

Add default

Always define:
☐

Accept Any Value:
☐

Expand Scope:
☐

Capture:
☐

Persistent:
☐

Zero set Allow:
☐

 
Force value(test):

Set

Default to first	Sets default value to the first.
Default Value	Define the default value if not first.
Always define	Separates this instance of the variable from ones of the same name lower in the tree (overridden by Expand Scope).
Accept Any Value	Allows any value to be accepted during conformity check.
Expand Scope	Allows the variable to be used lower in the tree towards the root.
Capture	Allows a variable to capture any expanded-scope variable from a branch.
Persistent	Saves value between panel reboots.
Zero set Allow	Allows for the variable to be blank
Force value (test)	Force set a value for the variable, use for testing

## Variable Use Case

Range variables are great for creating dynamic device parameters. In the example below, the variable is set within a parameter.



This is only a single example of the use of Options Variables.


First looking at a breakdown of the parameter the variable is going to be added into: Atem  
Program Input Video Source

DC:bmd-atem/1/ProgramInputVideoSource/1/1

**DC** (DEVICE CORE) :**bmd-atem** (BMD-ATEM) /**1** (DEVICE ID 1) /**ProgramInputVideoSource**  
(Specified parameter)  
/**1** (M/E number) /**1** (Input Number)

A range variable would most naturally be put in place of numerical values, making Device ID, M/E Number, or Input Number great places use a variable. Using the variable in place of the Device ID will allow for switching instances of the Atem.

It is possible to find the specific Device ID number of the Atems in the Device Details on the Home Page of Reactor.

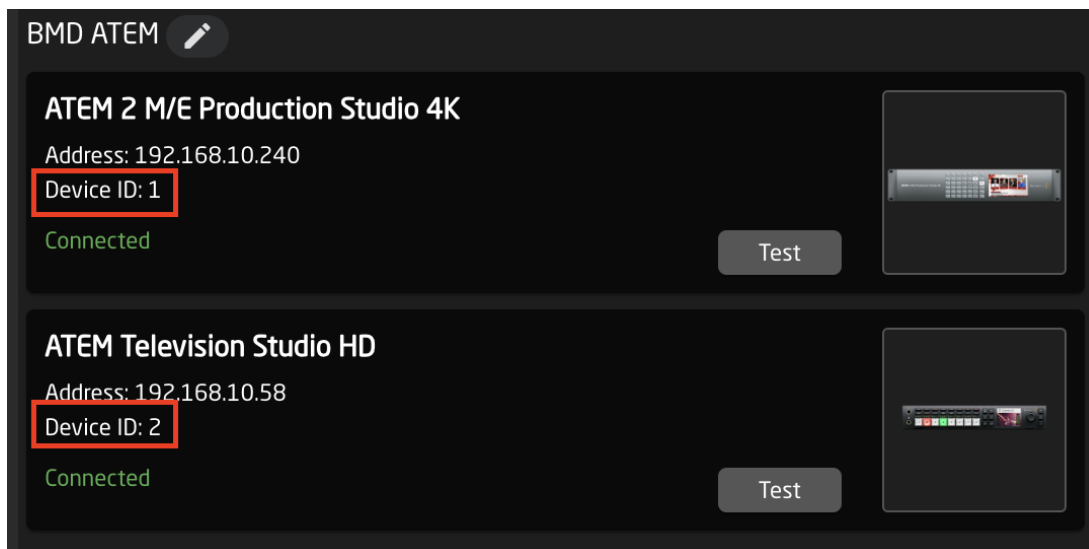

When creating the variable it is best to name is something easy to identify the place it should be used.

Variable

[DeviceIndex] - DeviceIndex

←

Layer: [Variable Examples](#)

Name:

DeviceIndex

Description:

Type:

Range

▼

Min:

1

Max:

10

Center (or Default):

1

Show More

Insetting that variable in the command would look like this:

DC:bmd-atem/**Var:DeviceIndex**/ProgramInputVideoSource/1/1

Please note: Formatting is important for the variable name.

After setting the variable into a parameter it is important to set up a way to control the variable.

Inspector

Behavior A




Layer: [Variable Examples](#)

←

Parameter:


*IO Reference*



DeviceIndex (Variable)

Settings Template:

*MasterBehavior*


 Change by step

Changes the value of a parameter in single, discrete steps.

Show More

The feedback will look like:

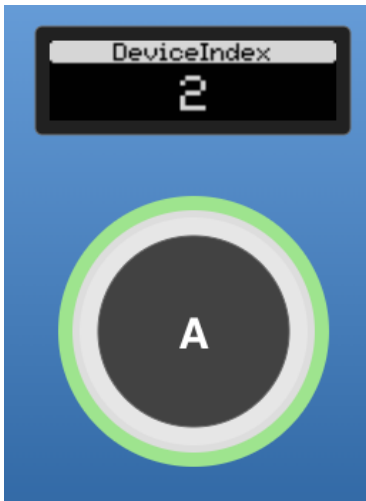

Confirm the variable is changing properly in the tree:

Variable Examples

A

A1

Var

[DeviceIndex]

-

2

Var

[ME]

-

1

> Default Blue Pill Server Configuration

Var

[DeviceIndex]

-

KeyMap

Mapped aliases: 1

Layer Files

1 layer imported

Root Layer - Bpwiki

File: BPWiki/latest 

Edit raw

KeyMap

Mapped aliases: 3

Options Variable

Variable Set Up

Variable

[DeviceIndex] - DeviceIndex

←

Layer: [Default Blue Pill Server Configuration](#)

Name:

DeviceIndex

Description:

Type:

Options ▾

Value:

Label:

⋮

⋮

↺

+1

↺

+1

Add option

Name	Variable's name
Description	Easy to understand description to help identify the variable's purpose
Type	Range or Options
Value	Value string for the variable
Label	Easy to understand label used for feedback
Flag	Sets the option as the default value
Trash	Deletes the Option
Duplicate	Duplicates the line
+1	Increments the line by +1
Add option	Default value for the variable if not saved on panel reboot.

Default to first:

☐

Default Value:

Remove

Always define:

☐

Accept Any Value:

☐

Expand Scope:

☐

Capture:

☐

Persistent:

☐

Zero set Allow:

☐

Force value(test):

Set

Show JSON

Default to first	Sets default value to the first.
Default Value	Define the default value if not first.
Always define	Separates this instance of the variable from ones of the same name lower in the tree (overridden by Expand Scope).
Accept Any Value	Allows any value to be accepted during conformity check.
Expand Scope	Allows the variable to be used lower in the tree towards the root.
Capture	Allows a variable to capture any expanded-scope variable from a branch.
Persistent	Saves value between panel reboots.
Zero set Allow	Allows for the variable to be blank
Force value (test)	Force set a value for the variable, use for testing

Variable Use Case



Options variables are great for Active If conditions on layers of the tree. In the example below, the variable is set up to make active different page layers in the tree.

This is only a single example of the use of Options Variables.

Variable

[Option] - Pages

←

Layer: [Boot Screen For Blue Pill](#)

Name:

Pages

Description:

This variable controls layer visibility for 3 layers.  
Rename the options to

Type:

Options

▼

Value:

Label:

⋮

page1

EXP

⌵

🗑

Value:

Label:

⋮

page2

WB

⌵

🗑

Value:

Label:

⋮

page3

Image

⌵

🗑

📄


+1

📄


+1

Add option

In the tree it would look like this. The blue line next to a layer indicates it is the active layer. In the layer where the variable lives, the variable also shows what its current value is.

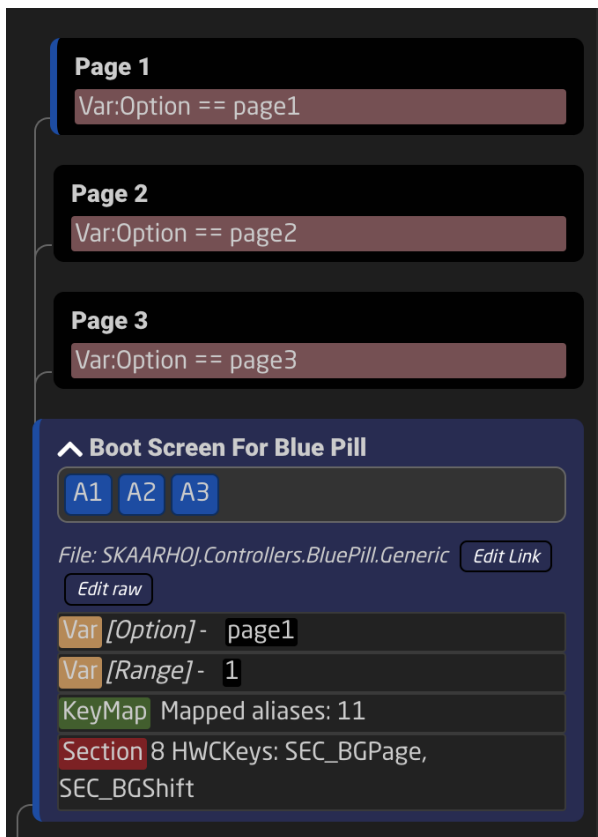


On the page layer, the variable is set as the Active If conditions, meaning that need to be true for the layer to be the active layer.

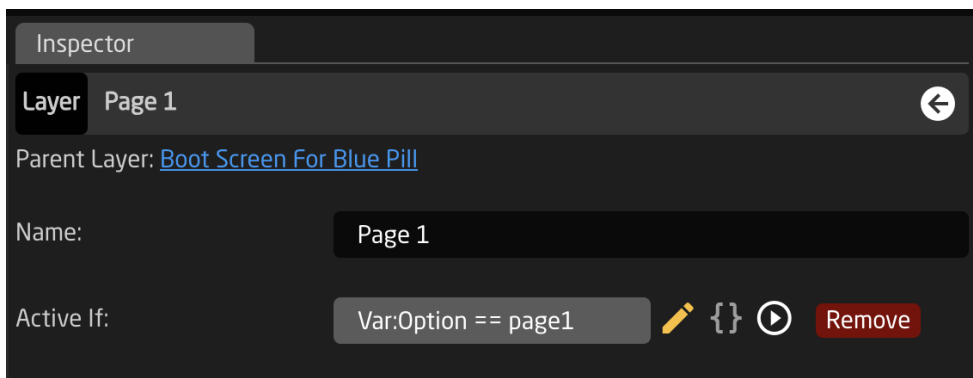

There are two main way to select the value of the parameter.


To set a specific value, mainly on key press or by trigger, select the variable as a parameter with the Settings Template as Set a Value Directly.

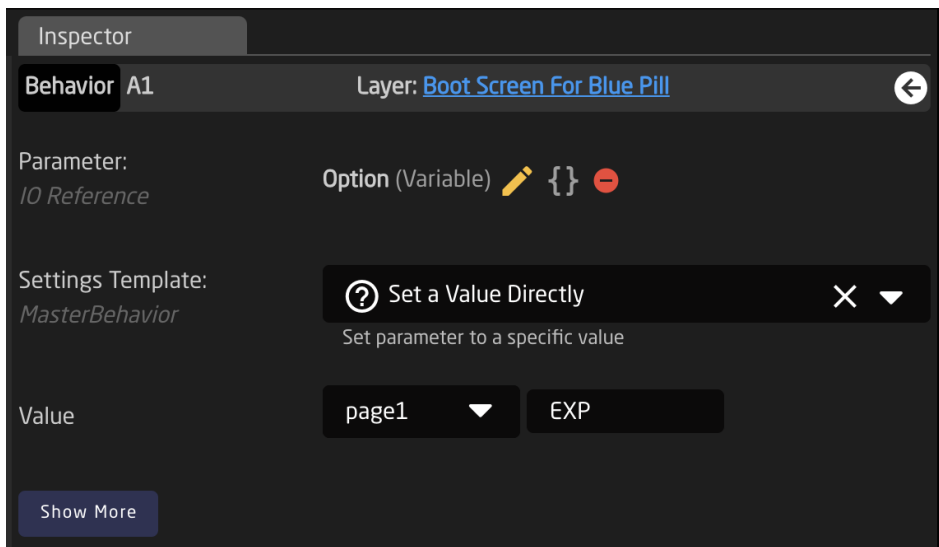

The feedback will look like this:



To cycle through the values, mainly on the pulse of an encoder, select the variable as a parameter with the Settings Template as Change Variable.

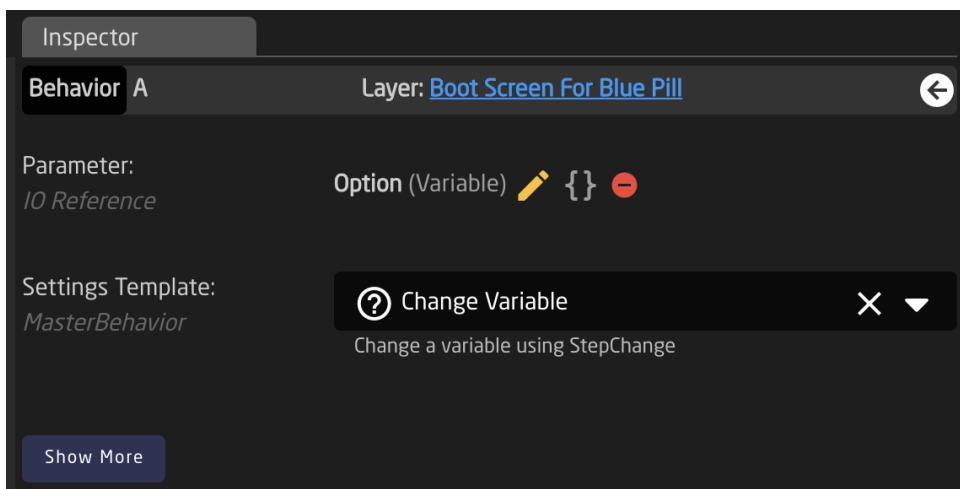

The feedback will look like this:



---

Revision #6

Created 2 November 2023 12:15:07 by Heather Pedersen

Updated 26 May 2025 11:09:25 by Lukas Bachschwell