



Clear-Com Station-IC

To connect the device core to Clear-Com, you need a Clear-Com Station IC client installed on your PC and copy the Api Key, which can be found on Settings/Remote/Key, to the Device core settings (see pictures below)

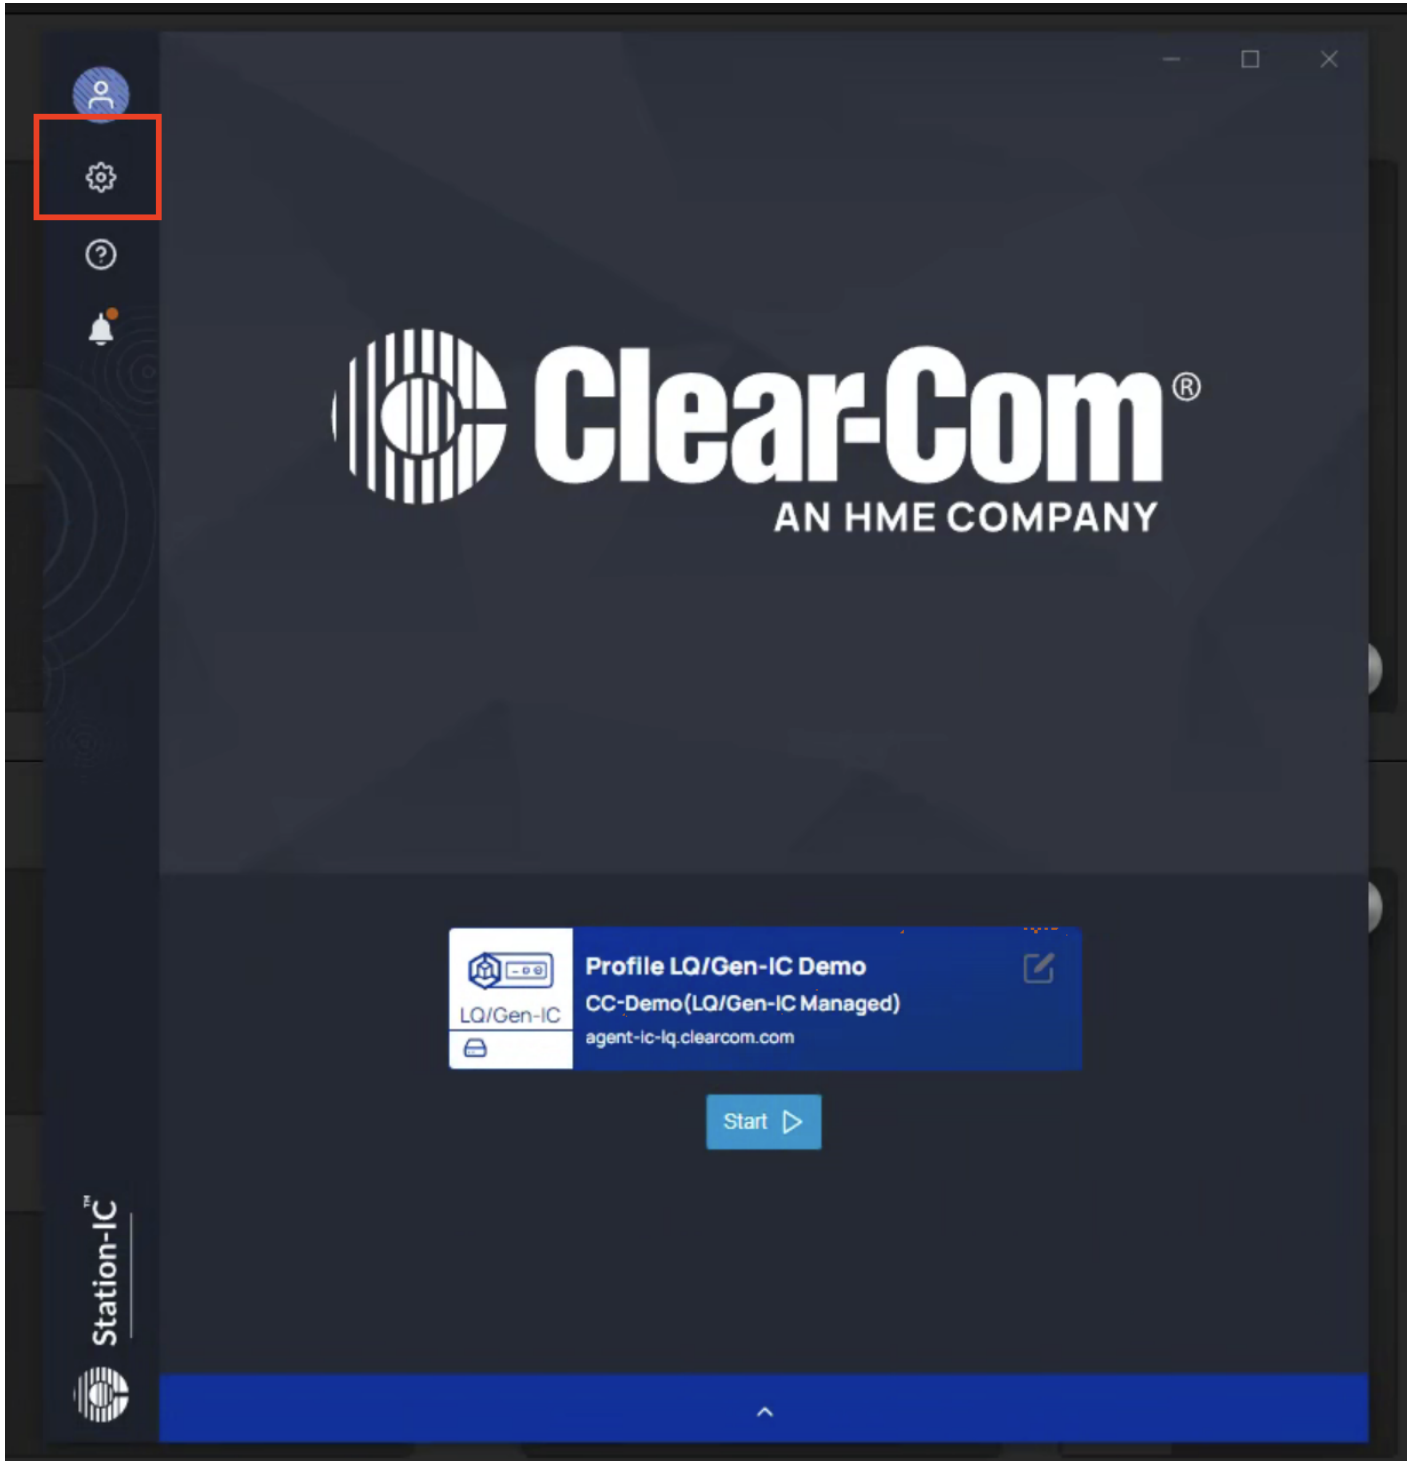

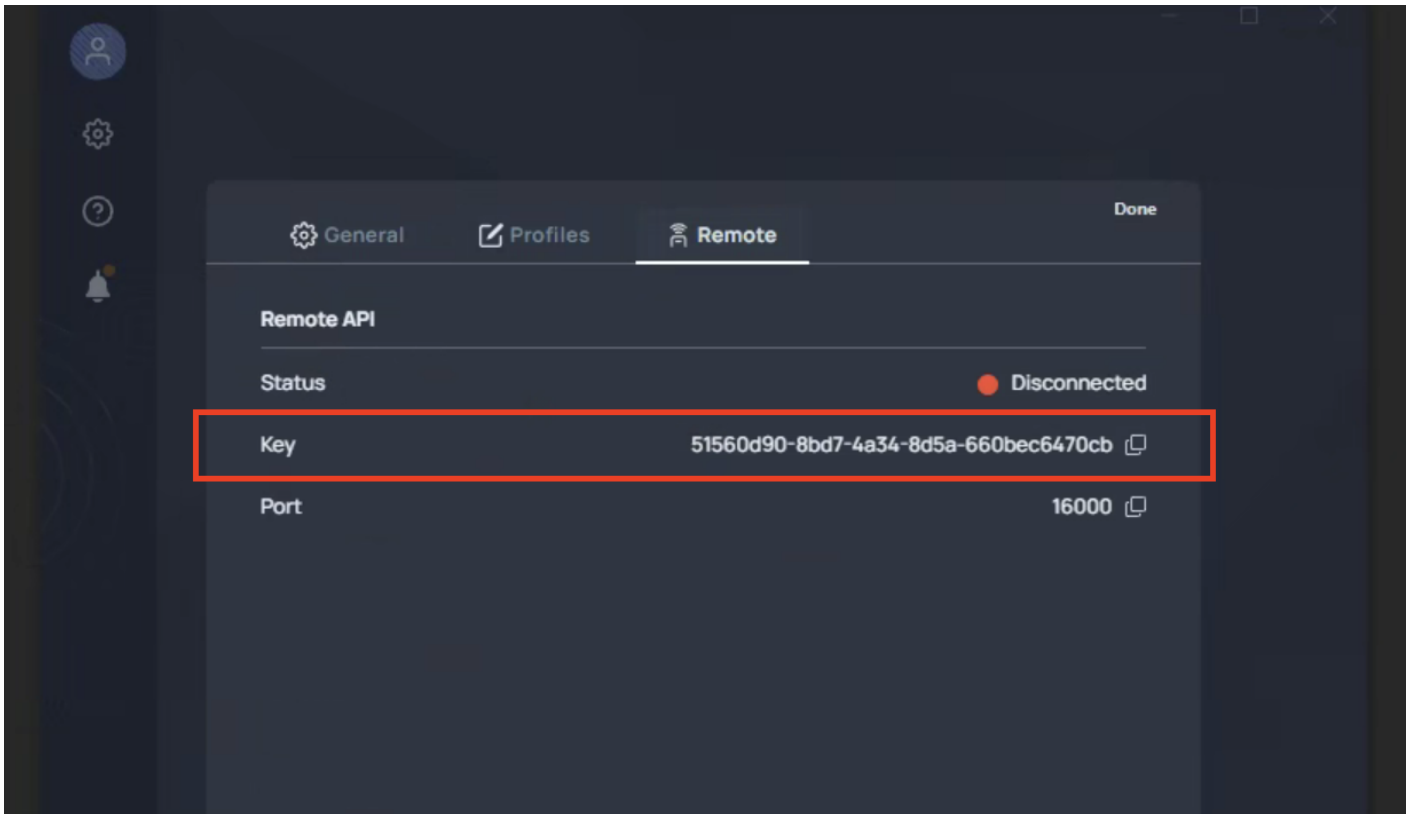

Revision #3

Created 15 September 2025 15:24:14 by Andrii

Updated 29 October 2025 14:08:03 by Andrii