


# Kessler Crane


## Adding and connecting to a Kessler Crane device from the Blue Pill platform

The Blue pill can connect to a Kessler Crane device in two ways, via WiFi or USB. In both cases, there are some special things that needs to be handled for the Blue Pill Core to connect successfully.

First, add your desired device inside the reactor, by clicking the add device and selecting "Add Device Manually". Then search and click add on your desired model.

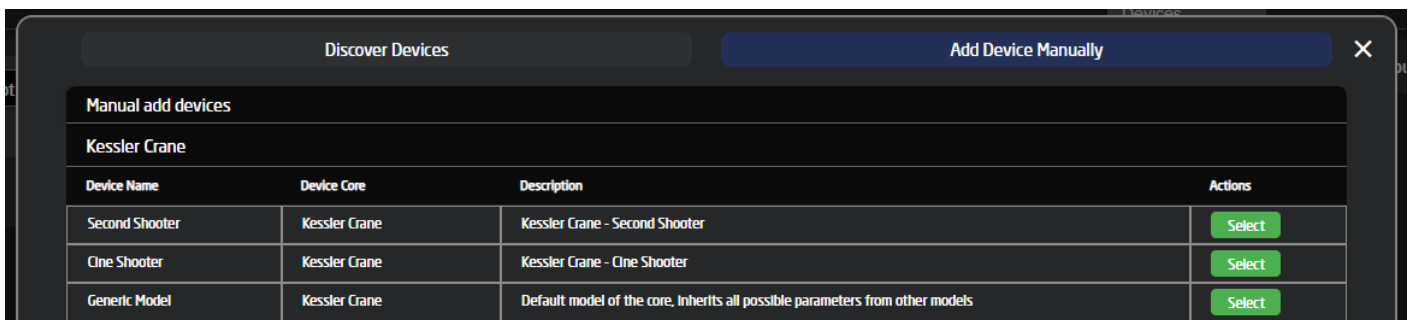

You should now be prevented with this device config box:

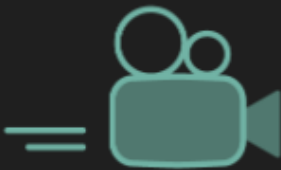

Unconnected  
Development status: alpha


Ping

## Second Shooter

Active ☒

IP 192.168.50.1

Port 5520

Password    
The password that is set on the device

ConnectionType usb ▼  
Chose between a USB connection or a TCP/WiFi connection

Name Second Shooter

Device Id 1

Model Id Second Shooter ▼

Description

Delete Save

If your config box does not have the "Connection Type" option, please click the save button and wait until you see the device on the left side say "Disconnected" or "Connected". If it's your first time installing the core, it will say "Installing Core" wait for that to finish, then restart reactor to load the new Device Config structure.

Clicking this "running" button will give you the option to restart reactor:




After restarting reactor, click on the device on the left side, and you should now see the "Connection Type" inside the device config popup. Please set this option to your desired setup type and continue the setup below.

### Updating your SkaarOS and enabling USB-A


For the Kessler core to connect over USB, you must be on **SkaarOS v0.14-pre2** or newer and have the USB-A connector enabled on the settings tab.

## Update SkaarOS

To update SkaarOs, go to "Settings" and click "Update".

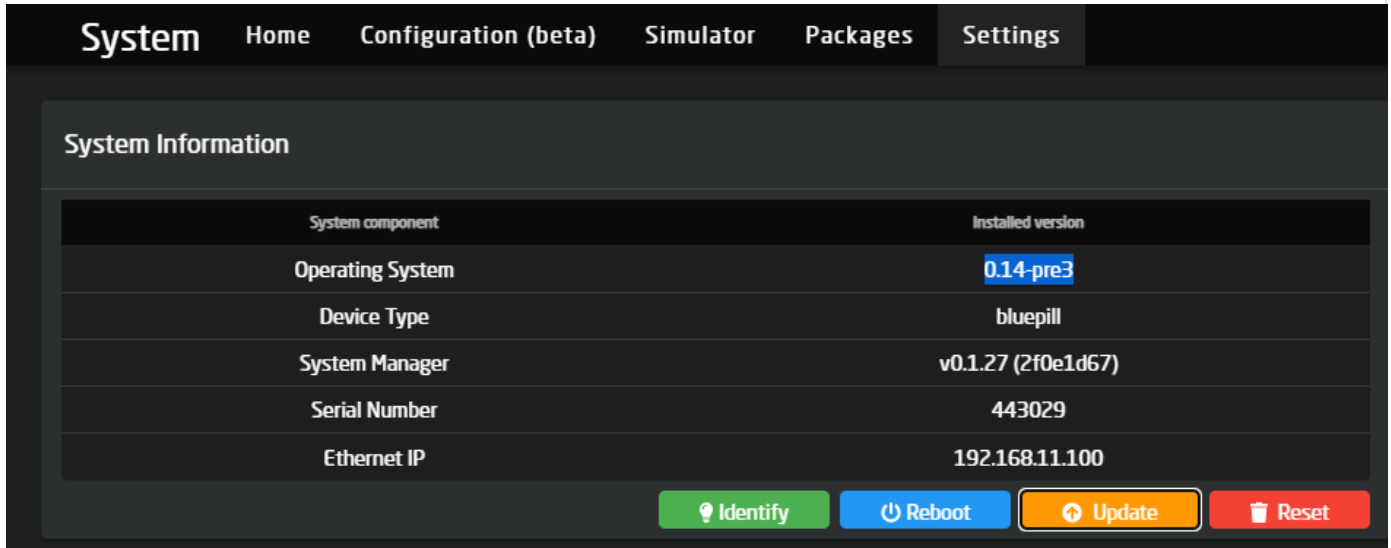

This will give you a popup where you select the v0.14 stable version (or higher). If you don't see a stable version for v0.14, enable "Show Pre-Releases" and choose the newest version available, the minimum supported version we need is v0.14-pre2. Then click update and **wait** for the Blue Pill to finish installing and restart the device.

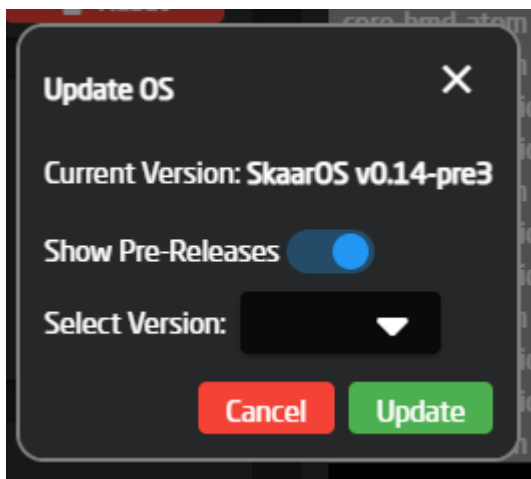

*Note if you do not see the prerelease option, scroll down to settings and enable "Advanced Mode"*

## Enable the USB-A connector

To enable the USB-A connector on a Blue Pill device, please go to "Settings" and scroll down to enable it here:

## Settings

### Remote Support

#### What is Support Mode?

Support Mode enables full access to controller and Web interface for the SKAARHOJ support team. Please also let the support team know your username and password for the webinterface or disable it here

Remember to turn off Support Mode when done.

Enable: ☐

### USB-A

#### What is USB-A Port Setting?

If you would like to use the USB-A port OR the MicroUSB port on the back. Per default you can use the MicroUSB port with the SKAARHOJ Firmwareupdater to change IP config and other settings. If you like to use the USB-A port (eg with a FrameGrabber) you need to enable this setting to allow data transfer. This will temporarily disable the ability to use the MicroUSB with the firmwareupdater. You can still use the MicroUSB to power the device.

Enable: ☒

## Connecting over USB


Connecting over USB is very simple but has two caveats that need to be addressed before it will connect.

First, please check with the guide inside the "Updating your SkaarOS and enabling USB" block and make sure you have that set up first.

If you are on a supported SkaarOS version and have the USB-A enabled.

Connect a USB-A to USB-Micro cable between the USB-A connector on the bluepill and the USB-Micro on the Kessler Device.

After that setup the device as shown below, a few things are not in use by the core when connecting over USB and can be left as is, this includes the IP and Port.



Connected  
Development status: alpha  
Ping

### Second Shooter

Active ☒


IP

Port

Password   
The password that is set on the device

ConnectionType   
Chose between a USB connection or a TCP/WiFi

If you get a green "Connected" status, you are now ready to use the device. If you do not get that, please open the package logs and check if there are any errors. If you get an error like this one, it means that your SkaarOS might not be on a supported version or that the USB is not enabled/connected on both ends.

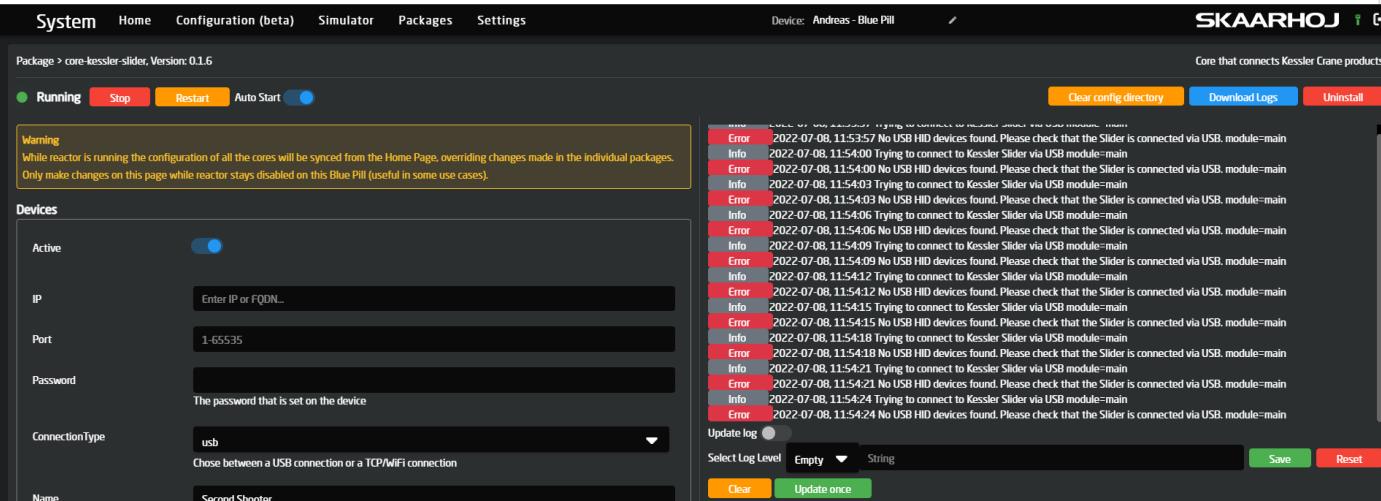


## Connecting over WiFi

When connecting to a Kessler Crane device over WiFi, you should configure the device like this inside reactor. All the default values should already be correct, as the IP and port of all Kessler sliders are the same when they host their own WiFi.

One thing does need changing from the default, and that is the Connection Type, which needs to be changed from "USB" to "TCP", as it, by default, is set to "USB".

The "Password" field is optional and depends on whether you set a password on the device itself.

The final setup should look like this:



Unconnected  
Development status: alpha  
Ping

Second Shooter

Active☒

IP192.168.50.1

Port5520

Password

👁

The password that is set on the device

ConnectionTypetcp

Chose between a USB connection or a TCP/WiFi connection

NameSecond Shooter

Device Id1

Model IdSecond Shooter

Description

Delete

Save

More info to be added here about how to enable WiFi on the slider themselves and how to connect to the WiFi...

Revision #7

Created 8 July 2022 08:31:52 by Andreas Hauge Thomsen

Updated 25 September 2024 09:07:32 by Christoffer Thinggaard