

Sony FX6

You can connect to Sony FX6 camera via cabled Ethernet or Wifi. We **strongly** suggest to use cabled Ethernet.

This will work with multiple FX6 cameras - they just need to have unique IP addresses.


Wired LAN setup

You need to enable Wired LAN in the camera settings:

- Menu > Network >
 - Access Authentication > Input password > set new password
 - set Wired LAN = ON
 - set Remote Control = ON

Also, you must set a static IP address:

- Menu > Network > Wired LAN > Detail Settings >
 - DHCP = OFF
 - Enter static IP / Subnet / Gateway

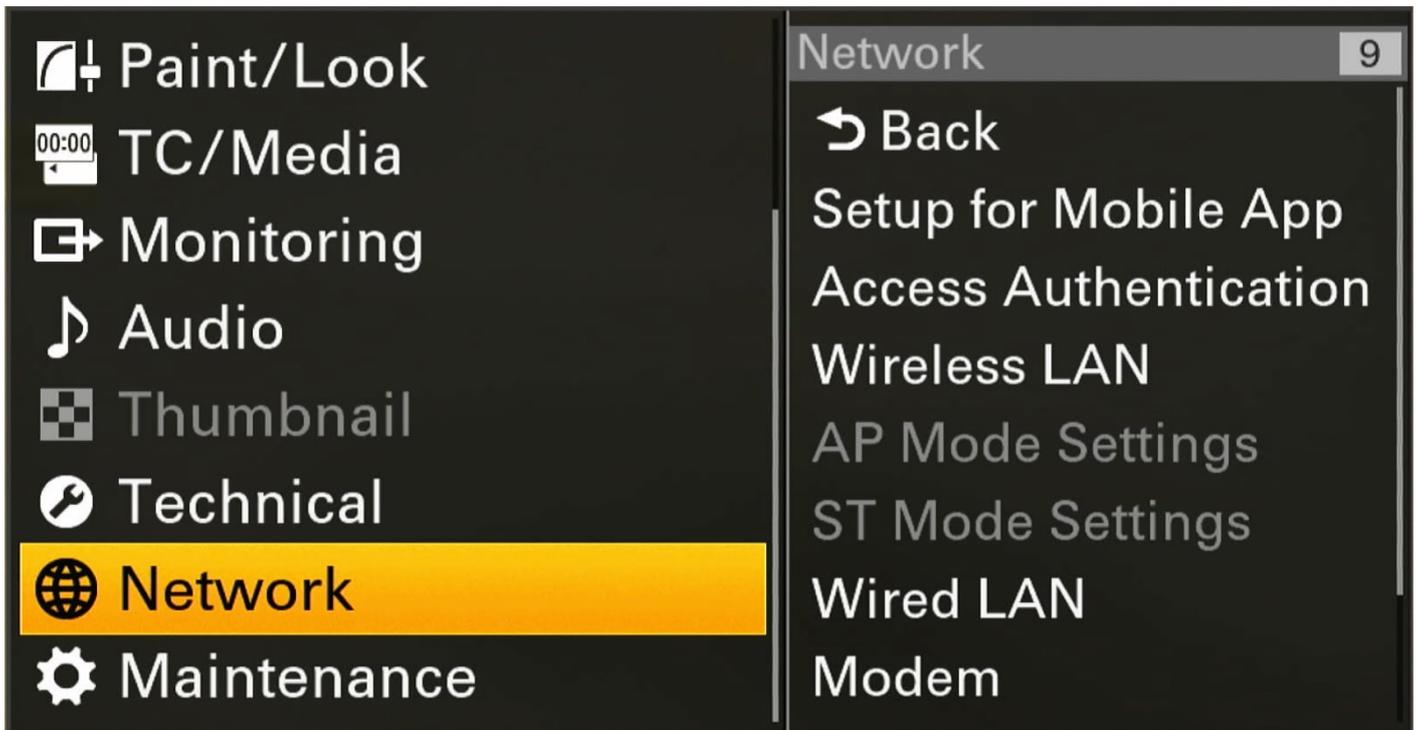

USB-C to Ethernet adaptor

To use cabled Ethernet, you need a "USB-C to Ethernet adaptor".
It is critical that you use an adaptor with compatible chip-set:

- Realtek RTL8153
- AX88179

Note: There are many other adaptors not working. They can even crash the FX6. This includes a chip-set with similar name; AX88179**A** - (has an A at the end) which does NOT work.

Here is an example of a working adaptor (from a Danish webshop):

<https://www.av-cables.dk/usb-3-1-til-rj45-netvaerksstik/delock-usb-c-3-1-gen1-ethernet-adapter-10-100-1000-mbps-s.html>



Revision #13

Created 5 October 2023 07:33:59 by Kenneth Kikkenborg

Updated 14 October 2024 11:19:25 by Heather Pedersen