


Check Device Core for Unused Parameters


If you have a Config, and would like to know what parameters aren't mapped to a config, is that easy to check in Reactor after version 2.0.2.

Open Home Screen of Reactor

Click the Device Core settings:

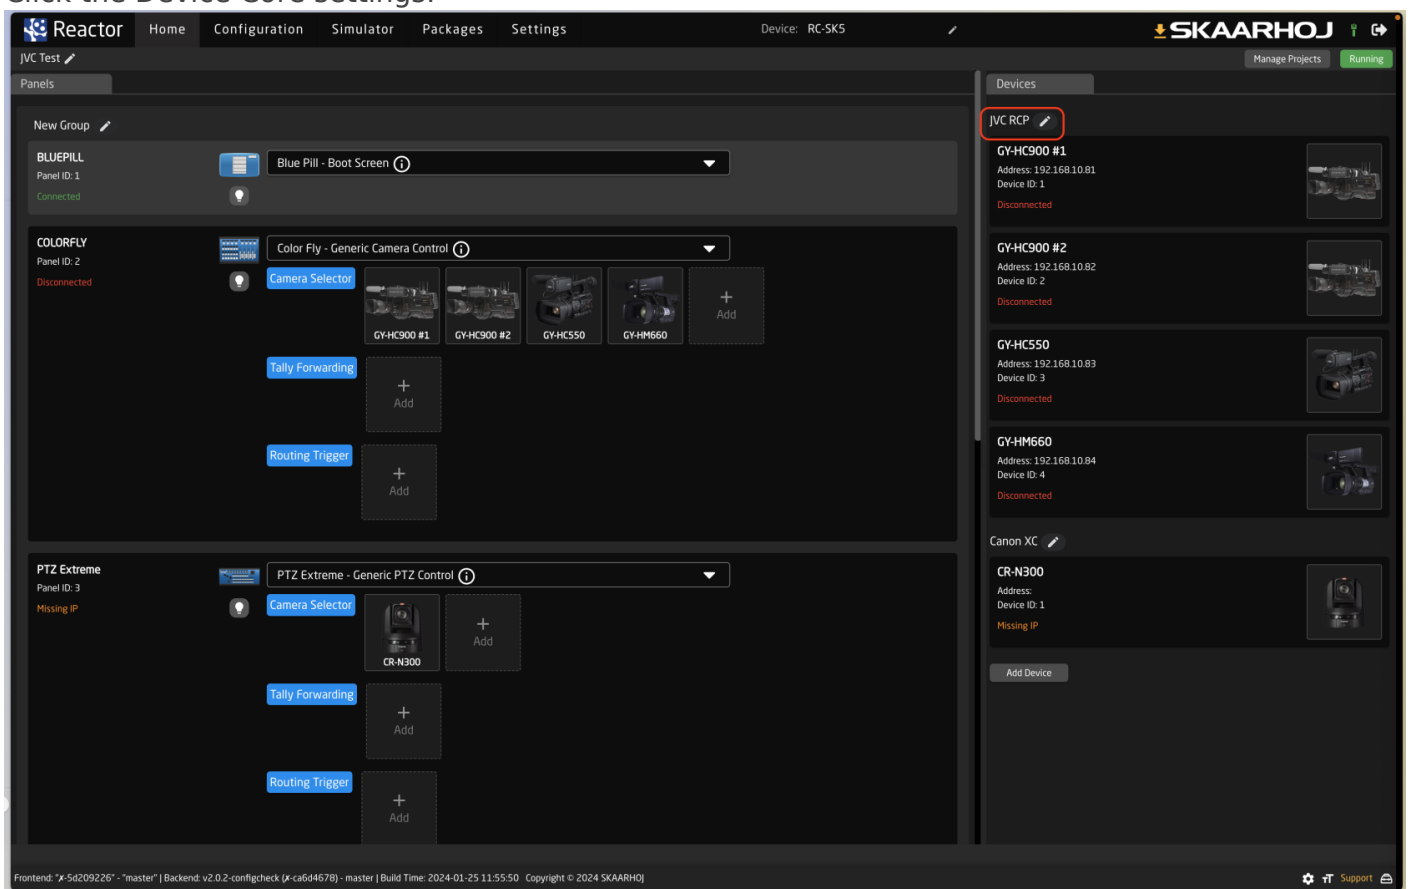

Open Parameter List:

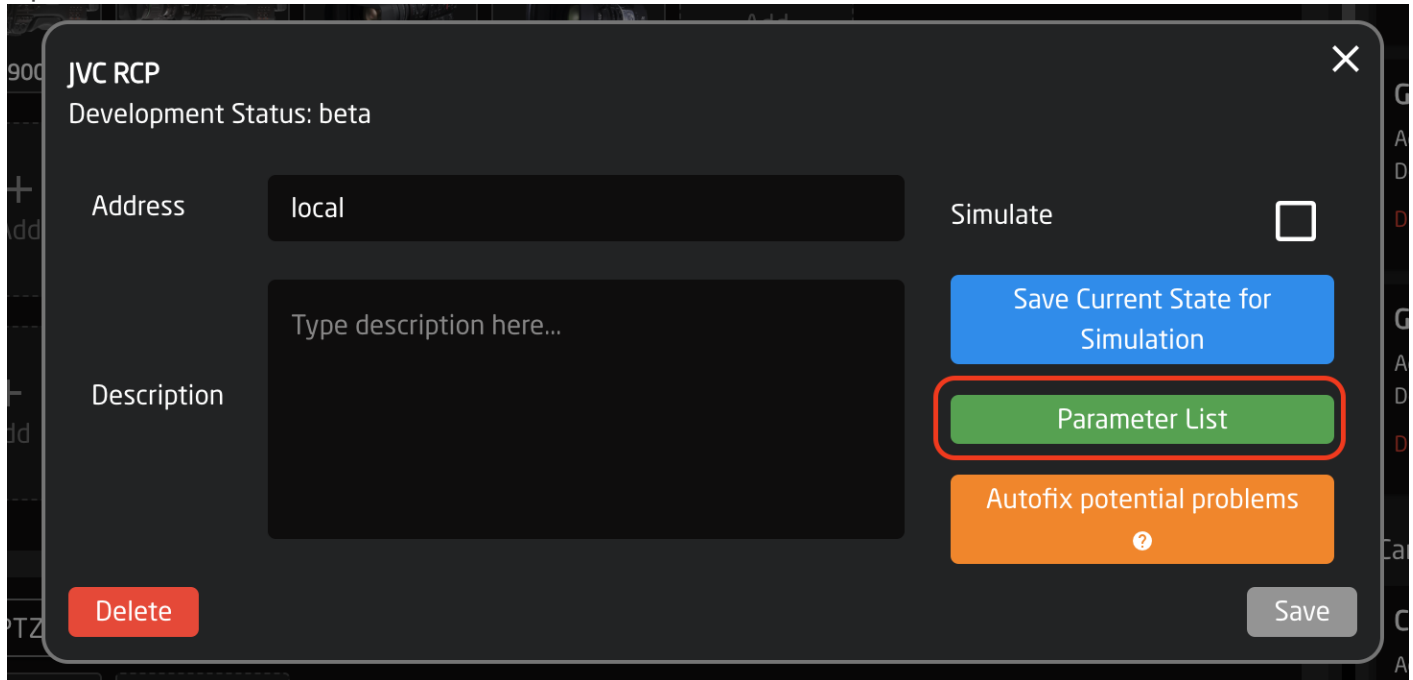

The screenshot shows a dark-themed dialog box titled "JVC RCP" with a subtitle "Development Status: beta". It features a "Address" field containing "local", a "Simulate" checkbox, and a "Description" text area with the placeholder "Type description here...". On the right side, there are three buttons: "Save Current State for Simulation" (blue), "Parameter List" (green, highlighted with a red border), and "Autofix potential problems" (orange). At the bottom left is a "Delete" button, and at the bottom right is a "Save" button.

Add "?configcheck=true" after the address:



Now the parameter list shows what Parameters are added to the config, and who isn't:

JVC RCP

(Version v0.0.6-pre10)

Development status: beta

Core for JVC RCP Broadcast cameras

ParameterCount: 60

Model: PTZ-400N

ParameterClass: Simple

| Parameter | GY-HC550 (1) JVC RCP - Model GY-HC550 Supports Discovery Development Status: beta | GY-HC900 (2) JVC RCP - Model GY-HC900 Supports Discovery Development Status: beta | GY-HM660 (3) JVC RCP - Model GY-HM660 Supports Discovery Development Status: beta | PTZ-100 (4) JVC RCP - Model PTZ-100 Supports Discovery Development Status: beta | PTZ-200N (6) JVC RCP - Model PTZ-200N Supports Discovery Development Status: beta | PTZ-400N (5) JVC RCP - Model PTZ-400N Supports Discovery Development Status: beta |
|--|--|---|---|--|---|---|
| AE | | | | | | |
| AE Level Control Perform AE Level Control aeLevelControl | Control: One-Shot Trigger Feedback: - Dimensions: Mode: (2) 1: Up 2: Down ----- | | | - | | |
| AE Level Control Incremental Control AE Level with incremental control style aeLevelControlIncremental | Control: Incremental control Feedback: String <div>Used in config</div> | | | - | | |
| AE Level Value Show AE Level aeLevelValue | Control: - Feedback: String | | | - | | |
| Full Auto Perform Full Auto fullAuto | Control: Binary Feedback: - | | | - | | |
| Exposure | | | | | | |
| Parameter | GY-HC550 | GY-HC900 | GY-HM660 | PTZ-100 | PTZ-200N | PTZ-400N |
| Exposure Set Exposure exposure | - | | | Control: 0:Auto 1:ShutterPriority 2:irisPriority 3:Manual Feedback: ----- <div>Used in config</div> | - | |
| Focus | | | | | | |
| Parameter | GY-HC550 | GY-HC900 | GY-HM660 | PTZ-100 | PTZ-200N | PTZ-400N |
| Focus Control Perform Focus Control focusControl | Control: One-Shot Trigger Feedback: - Dimensions: Mode: (2) 1: Far 2: Near ----- : (3) ----- | | | | | |
| Focus Control-Speed Type Control Focus with speed control type focusControlSpeed | Control: Integer [-3:3] Feedback: - <div>Used in config</div> | | | | | |
| Focus Mode | Control: | | | | | |

Revision #2

Created 25 January 2024 14:02:03 by Silas Sakskjær

Updated 17 June 2025 11:50:11 by Heather Pedersen